

Avery

Dimension


140 x 80 x 54 - 70 cm

140 x 80 x 54 - 70 cm Rectangular Rise & Fall
Table

SKU:

NV005-102-RT-202-C03-B1 & B2

2025 V 1.0

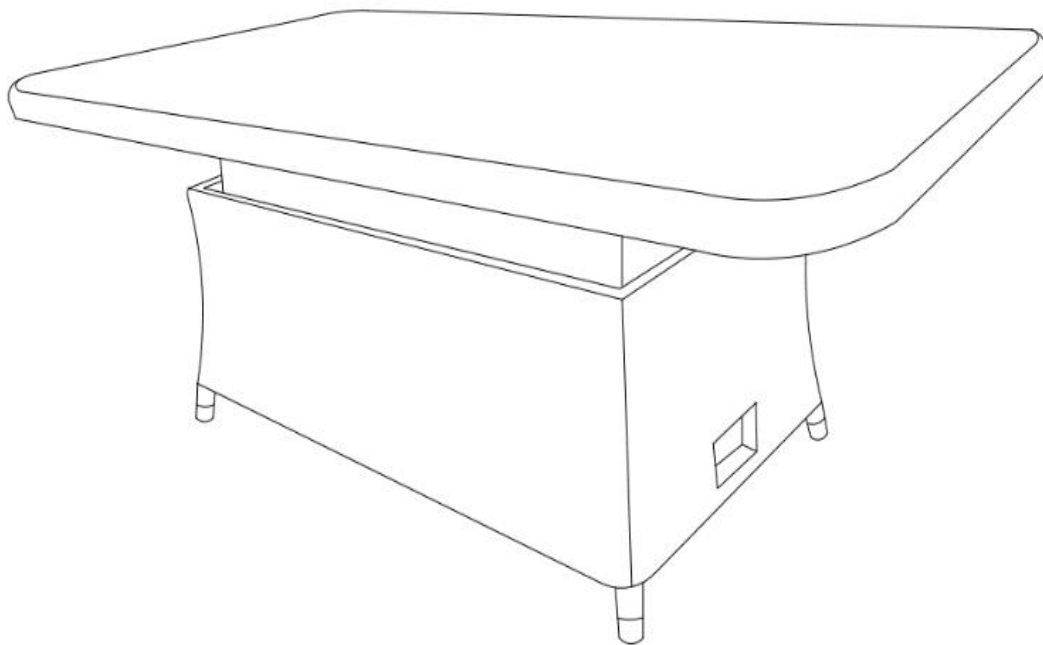

Assembly Instructions

IMPORTANT NOTICE

This booklet contains useful information about warranty
& care instructions. Please keep for future reference.




Safety Advice

Before you start:

- Ensure that you read this manual before starting to assemble your table.
- Never use power drills when assembling the furniture.
- Check that you have all parts from the parts list. Do not throw away any packaging until you are confident that you have all parts.
- Assemble this product on a soft/flat surface.
- Keep any plastic bags, tools and fittings away from children and pets.
- After prolonged use we recommend you check all the fittings are tightened securely.
- Please do not modify this product, use other tools, or substitute parts to build your item(s), as this will void your warranty.
- Please only use this product for its intended purpose as outdoor furniture within residential environment. Failure to do so will void your warranty.
- We reserve the right to make changes for product improvements.
- Please recycle packaging where possible.
- Place the tabletop safely to one side until it is required and never lay the tabletop on hard or rough surfaces during assembly.
- Throughout the assembly process, make sure all fittings are only finger tight. Upon completion, securely tighten all fittings.
- Nova Outdoor Living holds no responsibility for any damages caused due to normal wear and tear, incorrect assembly, misuse and/or negligence.

Parts List

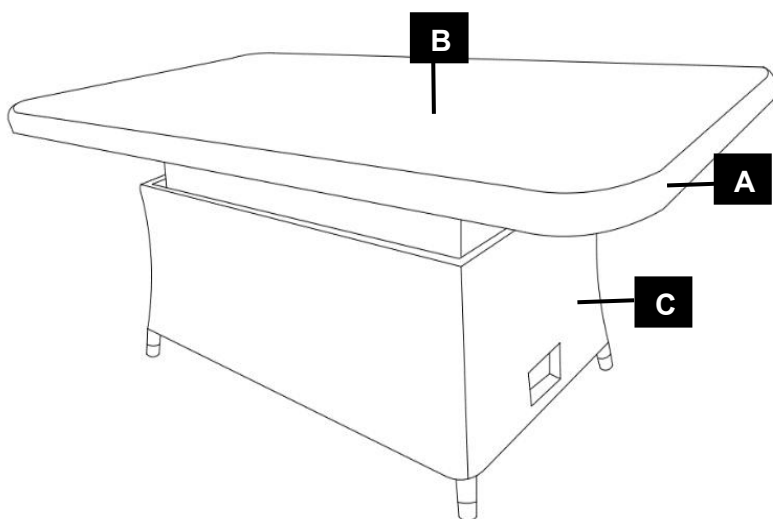

D



E



F





Part	Qty	Part Name
A	1	Table Top
B	1	Glass
C	1	Table Base
D	4	M6 x 40 mm Screw
E	4	Washer
F	1	Allen Key

Assembly


STEP 1

Loosely secure the table base to the table top using the M6 x 40mm screws, washers and the allen key. Once secure tighten all the bolts.

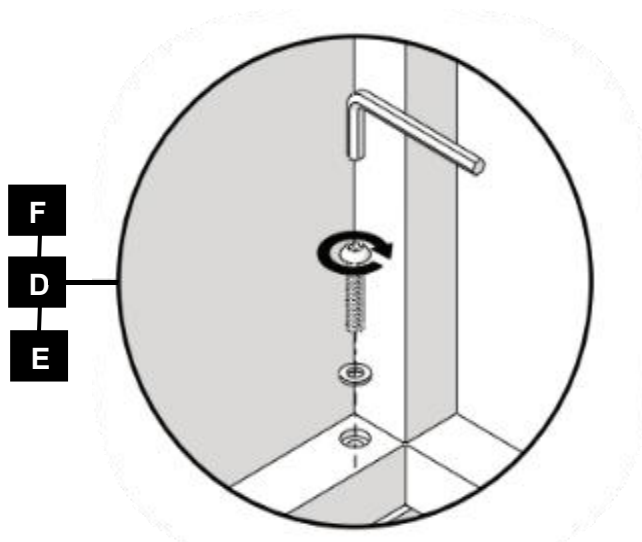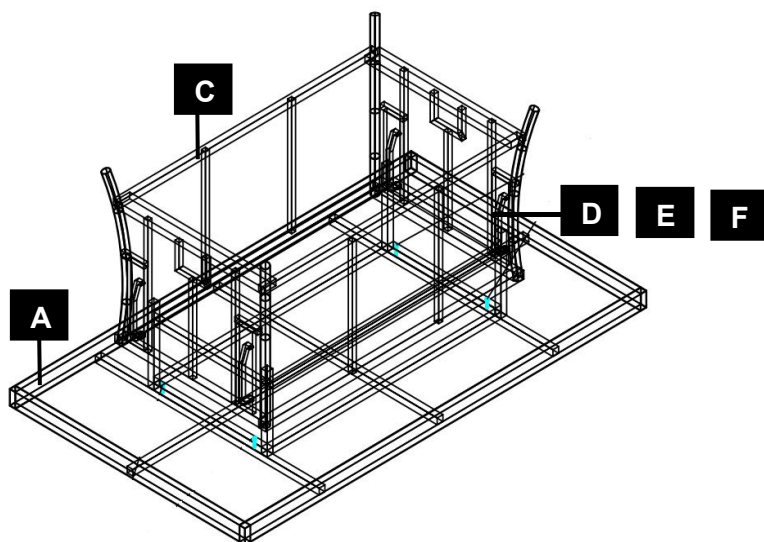



STEP 2

Turn the table over. Add the glass to the table top ensuring the suction rings are flat.

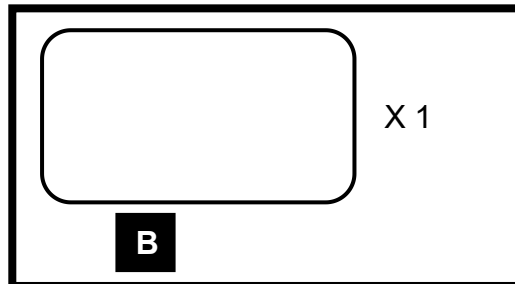

SAFETY WARNING!

Always lift and secure the glass with two people.

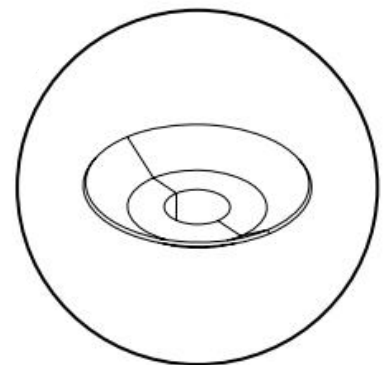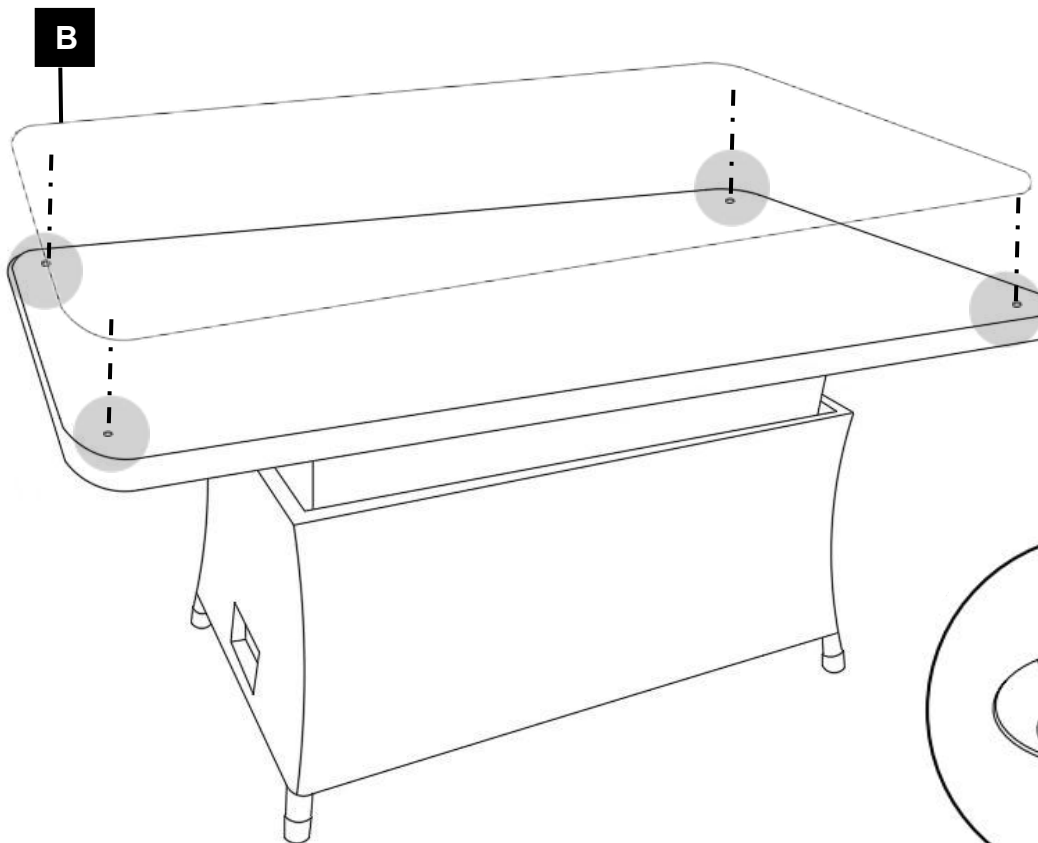


COMPLETE!

Assembly of the table is now complete!

ADJUSTING THE RISING TABLE

STEP 1

To adjust the height of the table, please place your foot in the holes located either side of table base (two people required).

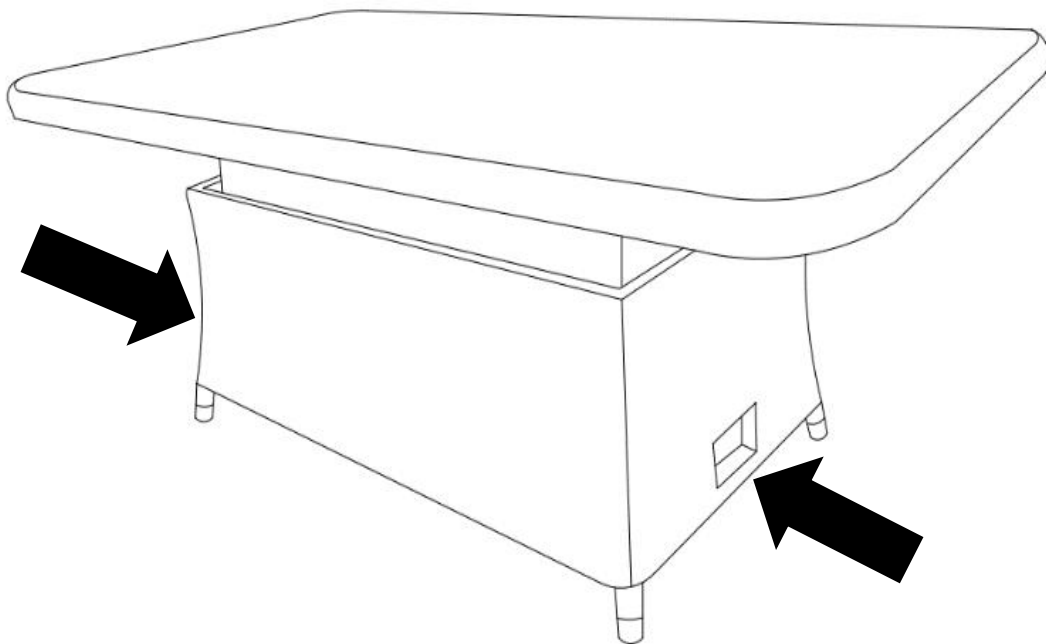


STEP 2

To adjust the table from the low coffee table position please move the tabletop upwards and sideways to fix it in the high dinner table position.

STEP 3

To adjust the table from the high dinner table position please move the tabletop a bit upwards, then sideways and lower it to the coffee table position.

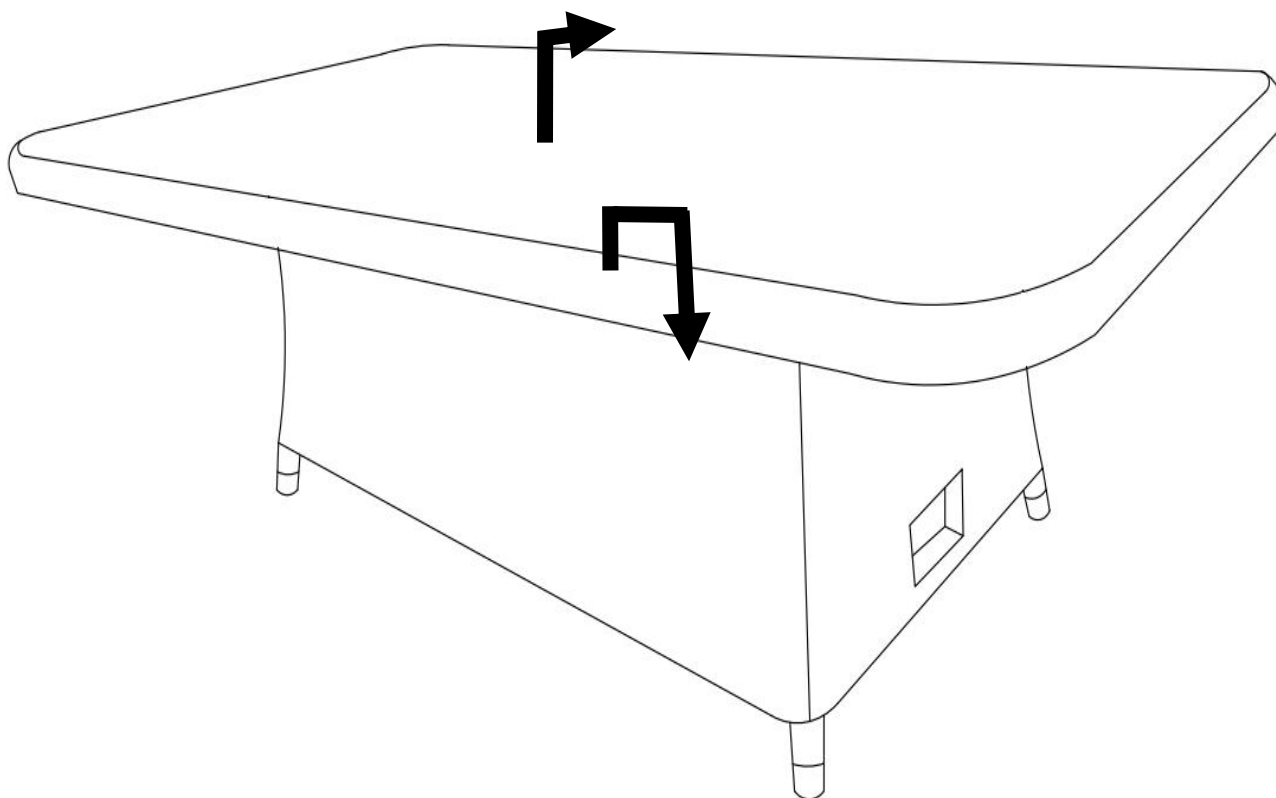

Care & Maintenance

- To prolong the life of the tabletop we recommend you always use place mats and coasters when putting glasses and plates onto the glass.
- Keep your table away from external extreme heat sources.
- We recommend you always use heat mats when placing hot objects on the tabletop.
- Be careful not to drop any objects onto the table as this could damage the tabletop.
- We always recommend two people to lift the glass.
- The table is fitted with plastic feet for protection. Never drag the table as this will accelerate wear and tear on the feet, which is not covered under warranty.
- We recommend cleaning the table with warm, soapy water. You can use a cloth or a soft-bristle brush with gentle pressure. Never use abrasive cloths or detergents to clean the glass. Once you have finished, wash off any residue with clean water.
- For optimum glass and rattan protection we recommend a protective cover is used all year round.
- We recommend clearing any spills quickly when exposed to direct sunlight. Any clear liquid on the glass will work as a magnifier, the temperature of the sun's rays will increase creating an extremely hot heat source which could damage the rattan. The same applies to leaving a filled drinks glass on the glass tabletop for an extended period.

Warranty Information

We regret to inform you that warranty claims cannot be accepted without proof of purchase. Warranties are valid from the date of delivery to the original purchaser only. For us to help you, please ensure all warranty terms have been adhered to.

These terms can be found at <https://warranty.novaoutdoorliving.co.uk/>

The warranty applies to residential domestic use within the UK only. It does not cover commercial use, misuse, accidental damage, or normal wear and tear. We reserve the right to repair and/or replace parts rather than a complete item at our discretion.

