


1 Summer 3 Seater Sofa & 2 Lounge Armchairs

2 SKU: NV065-102-LN-104
2025 v1.0


3

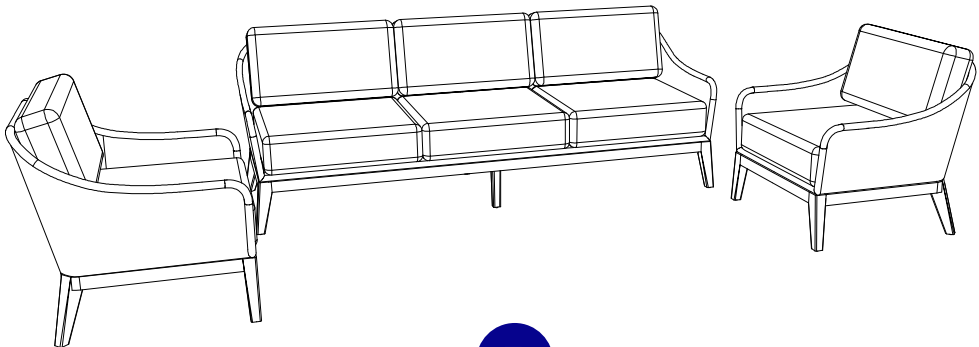

5

Assembly Instructions

4 **IMPORTANT NOTICE**
This booklet contains useful information about warranty & care instructions. Please keep for future reference.

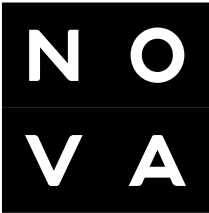

6

Before you start:


- Ensure that you read this manual before starting to assemble your furniture.
- Never use power drills when assembling the furniture.
- Check that you have all parts from the parts list. Do not throw away any packaging until you are confident that you have all parts.
- Assemble this product on a soft/flat surface.
- Keep any plastic bags, tools, and fittings away from children and pets.
- After prolonged use we recommend you check all the fittings are tightened securely.
- Please do not modify this product, use other tools, or substitute parts to build your item(s), as this will void your warranty.
- Please only use this product for its intended purpose as outdoor furniture within residential environment. Failure to do so will void your warranty.
- Nova Outdoor Living holds no responsibility for any damages caused due to normal wear and tear, incorrect assembly, misuse and/or negligence.
- We reserve the right to make changes for product improvements.
- Please recycle packaging where possible.
- We recommend cleaning the furniture before use on light surfaces to avoid excess furniture oil

Characteristics of wooden furniture:


- Every wooden furniture item has a unique colour variation, meaning no two items will look identical.
- Knots and grain variations of the wood are a natural trait of wood and is not a fault within the product.
- Splitting and cracking within the furniture is a natural occurrence as the wood ages.
- If the furniture is left untreated, the furniture will naturally change appearance throughout its life span.

1 Sofa Parts List


2 A x1

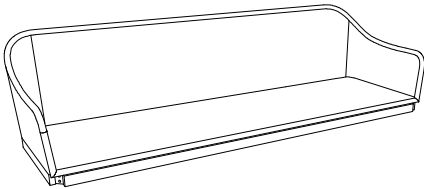

B1 x1

 


B2 x1

 

C x2




 D x2




3

 
E x8



F x8

 

G x1

 

Parts List


4

Part	Qty	Part Name
A	1	SofaFrame
B1	1	Front leg
B2	1	Front leg
C	2	Back leg
D	2	Middle leg

Part	Qty	Part Name
E	8	M6/16x2 Washer
F	8	M6 x 50mm Screw
G	1	M4 x 60 Allen Key

Assembly

STEP 1

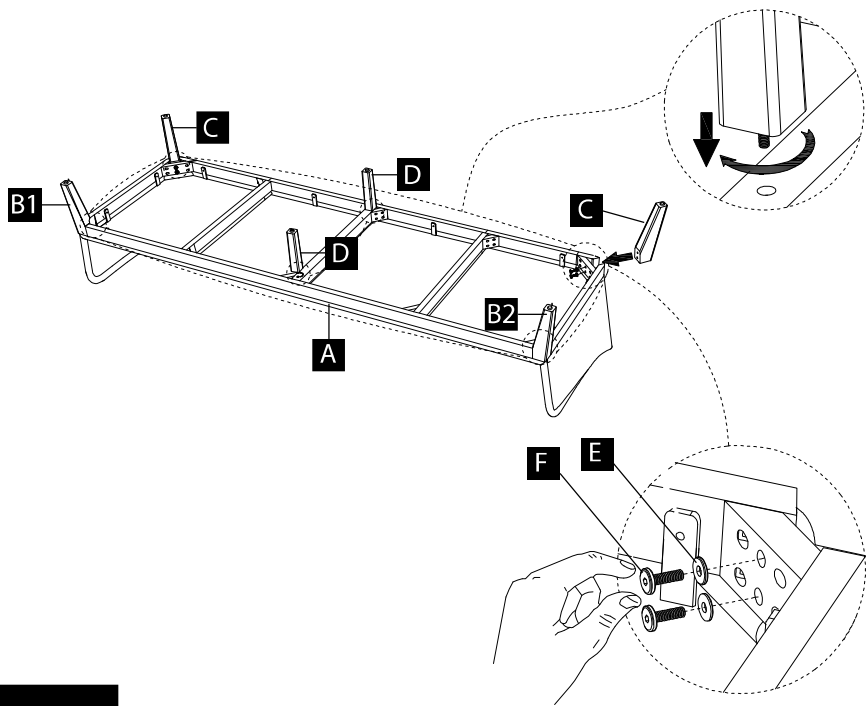

Top Tip

Utilise the outer cardboard packaging where possible. This will protect your furniture when assembling and prevent damage.

A x1

B1 x1

 
B2 x1

C x2


D x2

E x8

F x8




STEP 2

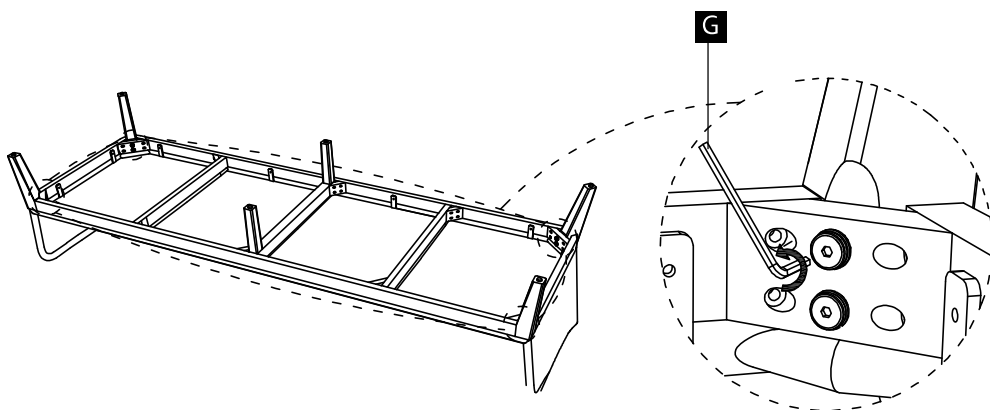


Tight 100%

 G x1




1 Armchair Parts List


2 A x1

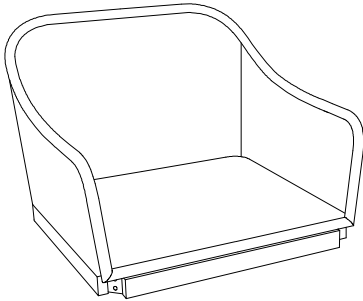

B1 x1

 

B2 x1

 


C x2




3

 
D x8



E x8

 

F x1

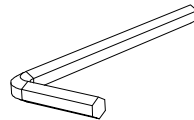

Parts List


4

Part	Qty	Part Name
A	1	Armchair Frame
B1	1	Front leg
B2	1	Front leg
C	2	Back leg

Part	Qty	Part Name
D	8	M6/16x2 Washer
E	8	M6 x 50mm Screw
F	1	M4 x 60 Allen Key

Assembly

STEP 1

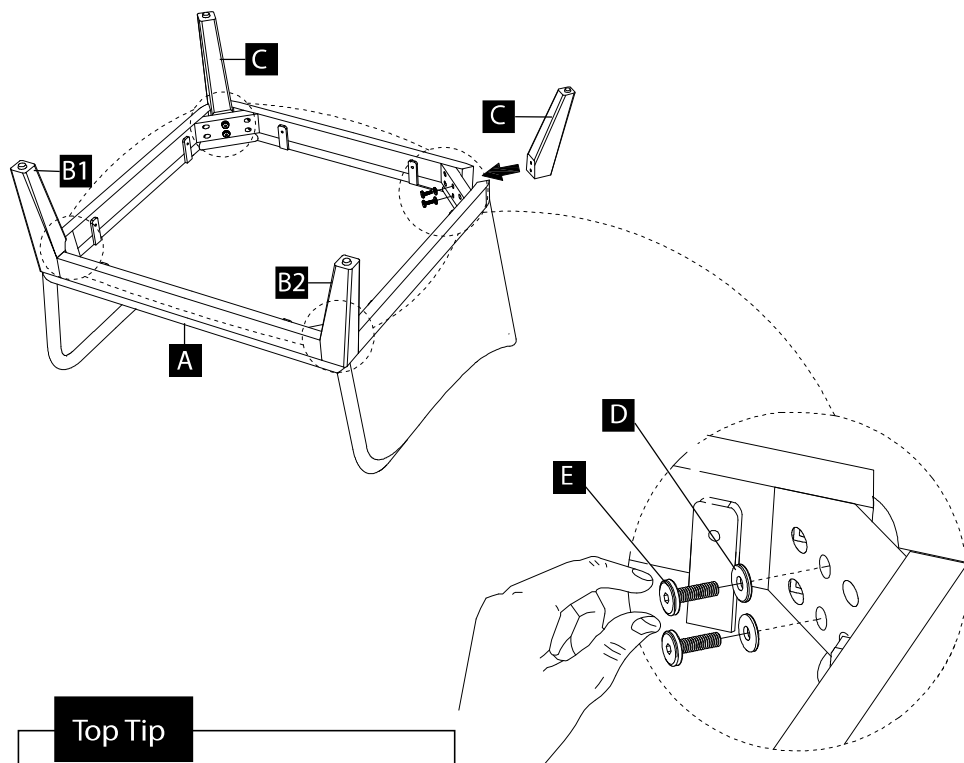

Top Tip

Utilise the outer cardboard packaging where possible. This will protect your furniture when assembling and prevent damage.

A x1



B1 x1



B2 x1



C x2




D x8



E x8




STEP 2

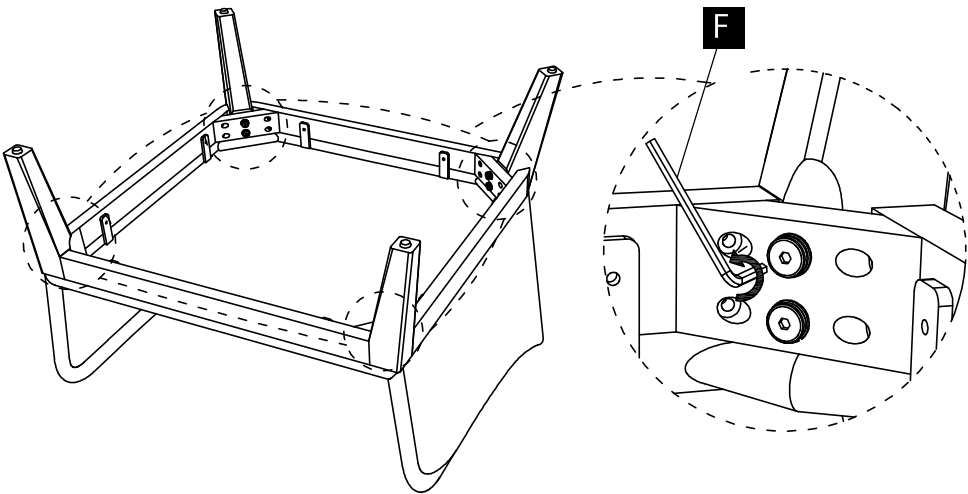

Tight 100%

 F x1



Care & Maintenance

FURNITURE CARE

When moving your furniture, do not drag it across your patio. This can damage the feet of your furniture as well as your patio. Only pick the furniture up by the solid frame.

WOOD CARE

Light scratches will blend naturally into the Oak wash finish, adding character. For deep scratches, use a matching wood repair stain, marker, or pencil. Avoid sanding, as it can permanently damage the finish. Consider placing protective surfaces on the bottom of your furniture legs to keep your furniture looking its best. Never jet wash the furniture as this can cause damage to the wood.

During winter, we recommend storing the furniture in a well-ventilated area to help prevent expansion of the wood.

ROPE CARE

Do not pull hard on the material as it can be stretched out of shape. Clean with a soft brush and soapy water.

CUSHION CARE

Whilst the cushions are showerproof, it is advised not to leave them out in the rain as this can make them dirty. When the set is not in use, cushions should be stored in a cool, dry place. Do not leave cushions on the furniture if using a garden protective cover.

To avoid any stains on your cushion cases, clean up any spills immediately with a damp cloth. If your cushions start to look dirty or marked, remove the cushion filling and handwash the cushion case in warm, soapy water. Do not use bleach.

We all have a favourite seat, so it is important to keep all cushions in rotation to ensure equal usage. Swapping cushions between seats will provide even wear on the two cushions.

Please note the following is not covered within the warranty:

- General wear and tear including staining and burns.
- Accidental damage
- Splitting and cracking of the timber, which, as it dries out throughout the year, is part of the natural ageing process.
- Wood knots – this is a natural occurrence of wooden furniture

We regret to inform you that warranty claims cannot be accepted without proof of purchase. Warranties are valid from the date of delivery to the original purchaser only. For us to help you, please ensure all warranty terms have been adhered to.

These terms can be found at <https://warranty.novaoutdoorliving.co.uk/>

The warranty applies to residential domestic use within the UK only. It does not cover commercial use, misuse, accidental damage, or normal wear and tear. We reserve the right to repair and/or replace parts rather than a complete item at our discretion.

