


Astra Cantilever Parasol

SKU:

NV020-035GY / NV020-036GY / NV020-037GY

2024 v1.0

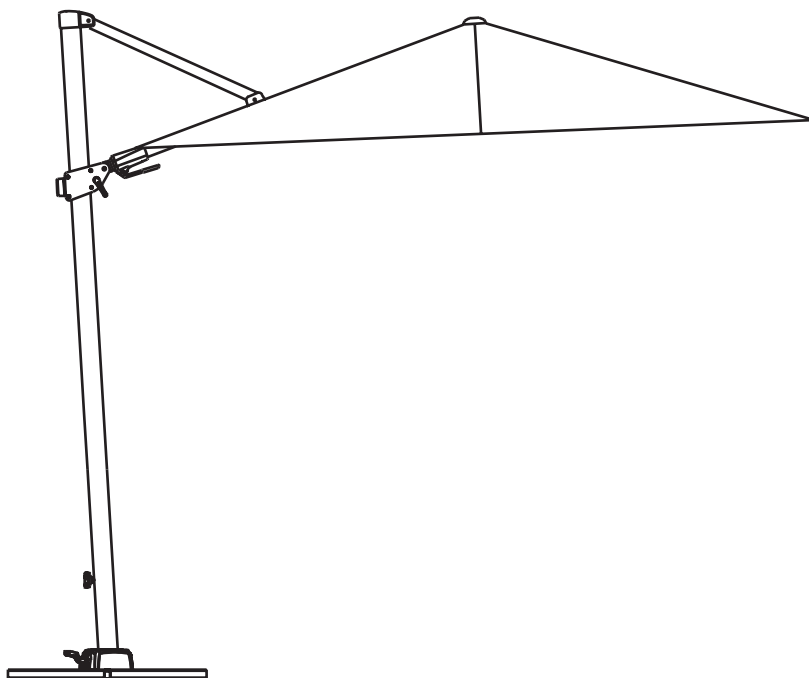

Assembly Instructions

IMPORTANT NOTICE


This booklet contains useful information about warranty & care instructions. Please keep for future reference.



Parts List


A

x1

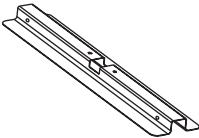

B

x1

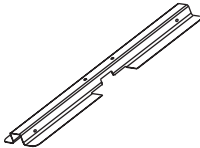


C

x1




D

 x1




E

 x4



F

 x4




G

x8



H

x1

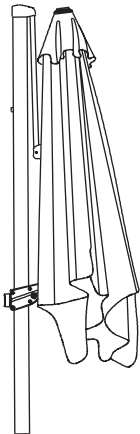

I

x1



J

x1



K

x1



M

x1




N

x2



O

x1

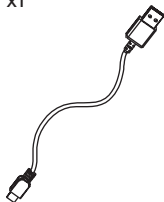


P

x1



Q

 x1



Parts List

Part	Qty	Part Name	Part	Qty	Part Name
A	1	Bottom Cross Section	I	1	Thumb Screw
B	1	Top Cross Section	J	1	Crank Handle
C	1	Rotating Base Plate	K	1	Base Cap Plate
D	1	Base Stand	M	1	Base Cap Cover
E	4	M8x14mm Bolt	N	2	Battery Pack
F	4	M8x20mm Bolt	O	1	Charging Cable
G	8	Ø8 Washer	P	1	Allen Key
H	1	Parasol	Q	1	Cover

Safety Advice



Before you start:

- Ensure that you read this manual before starting to assemble your item(s).
- Check that you have all parts from the parts list. Do not throw away any packaging until you are confident that you have all parts.
- Keep all plastic bags and fittings away from small children to avoid danger of suffocation and/or choking.
- Do not modify, use other tools or substitute parts to build your item(s), this can and will void your warranty.
- This product may only be used for its intended purpose as outdoor sun-shade within a residential environment. Failure to do so can and will void your warranty.
- Nova Outdoor Living holds no responsibility for any damages caused due to normal wear and tear, incorrect assembly, mis-use and/or negligence.
- We reserve the right to make changes for product improvements.
- This parasol requires additional base weights; we recommend a minimum of 80kg or heavier.
- Do not over-tighten the crank, this will cause excessive stress on the crank cord which could lead to fraying or snapping.
- Do not leave the parasol up when not in use or during windy and wet conditions.

Assembly



STEP 1

Position the top cross section over the bottom cross section. Position the base plate onto the cross sections. Loosely secure the M8 x 20mm screws and washers, once in place tighten all the bolts with the Allen key.

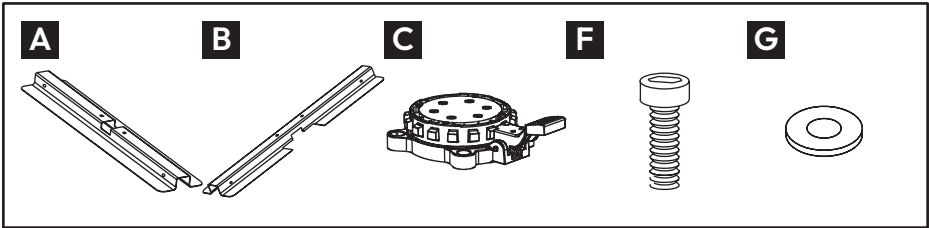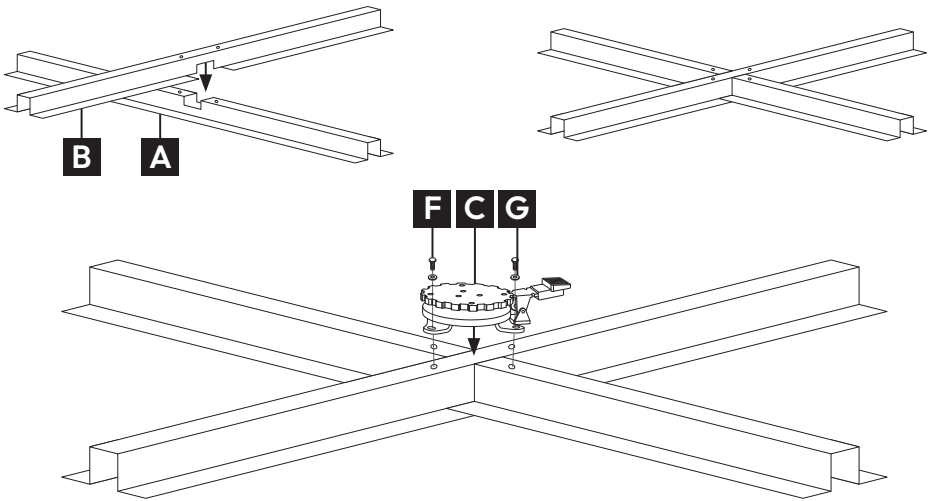

STEP 2



Position the base stand onto the base plate. Loosely secure the M8 x 14mm screws and washers, once in place tighten all the bolts with the Allen key. Position the base cap plate and the base cap cover over the base stand.

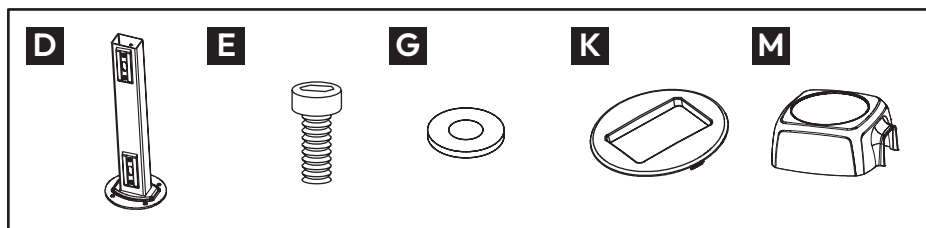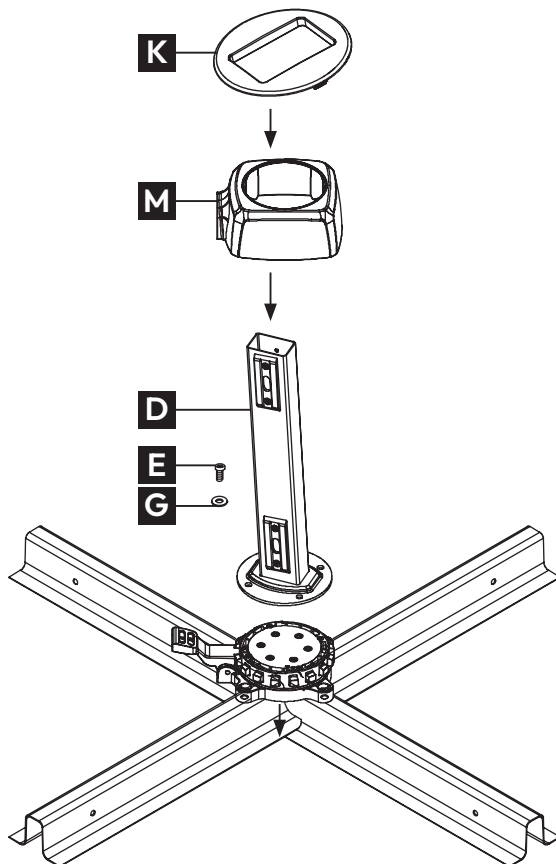

Assembly


STEP 3

Slide the parasol onto the base stand; ensure that the handle of the parasol is placed at the rear of the base stand. Screw the thumb screw into the rear of the base stand.

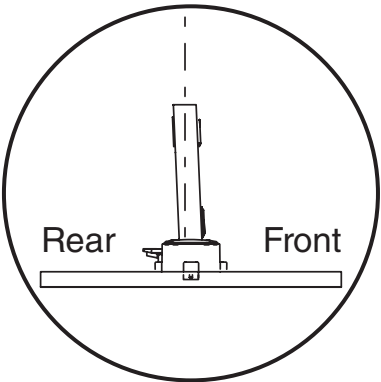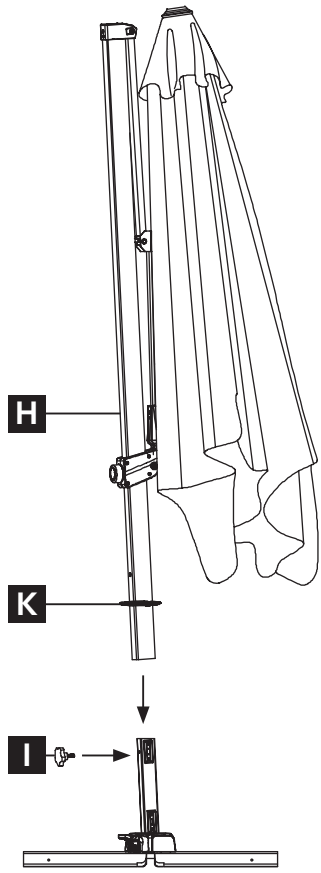


Complete

Assembly of the parasol is now complete.

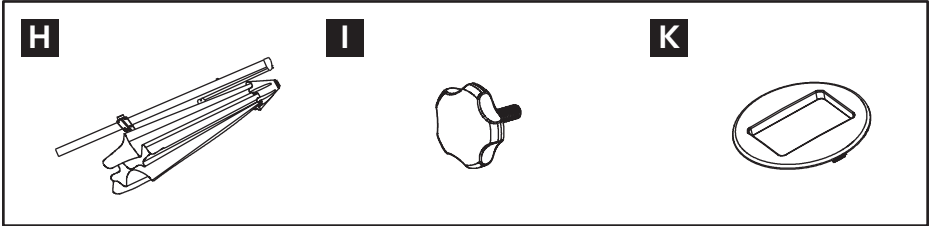

Operating the parasol


To raise and lower the parasol, turn the dial on the back of the crank handle. Turn clockwise to raise and anticlockwise to lower.

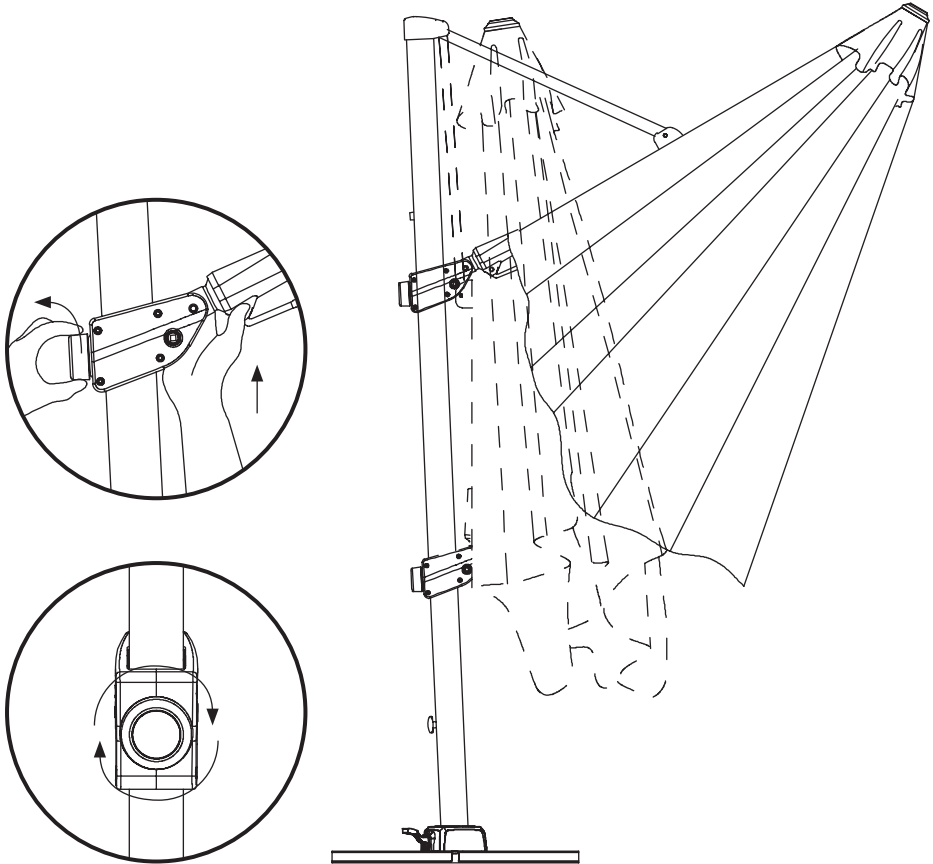

How to operate


Operating the parasol

To open and close the parasol, place the crank handle into the handle of the parasol. Turn clockwise to open and anticlockwise to close.

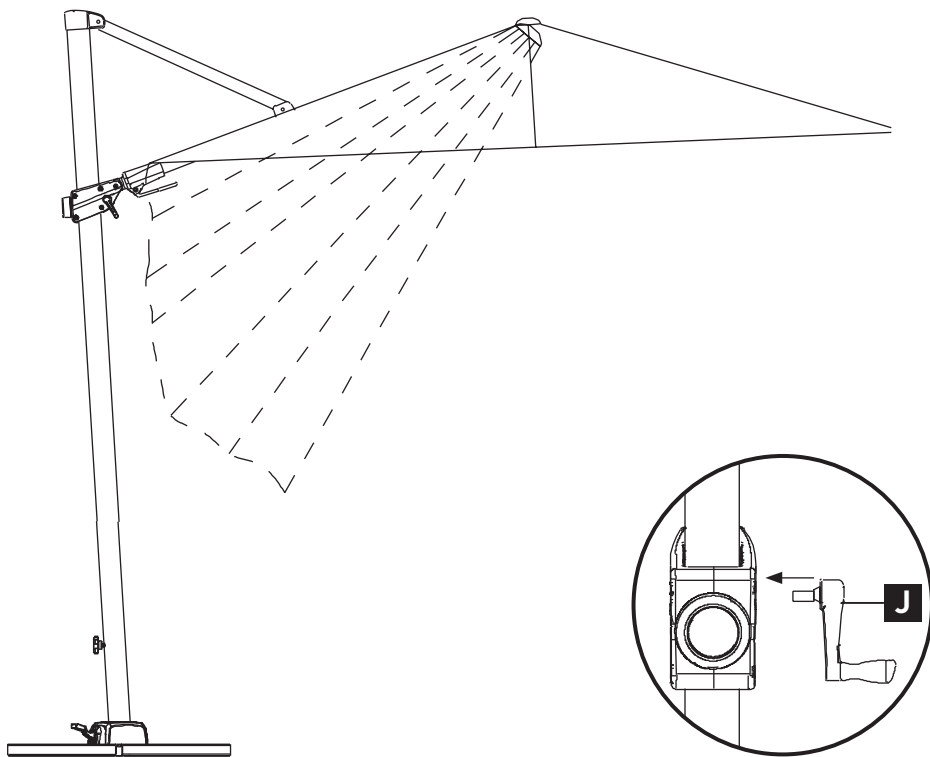

Operating the parasol


To tilt the parasol, turn the dial on the back of the crank handle. Turn clockwise to raise and anticlockwise to lower.

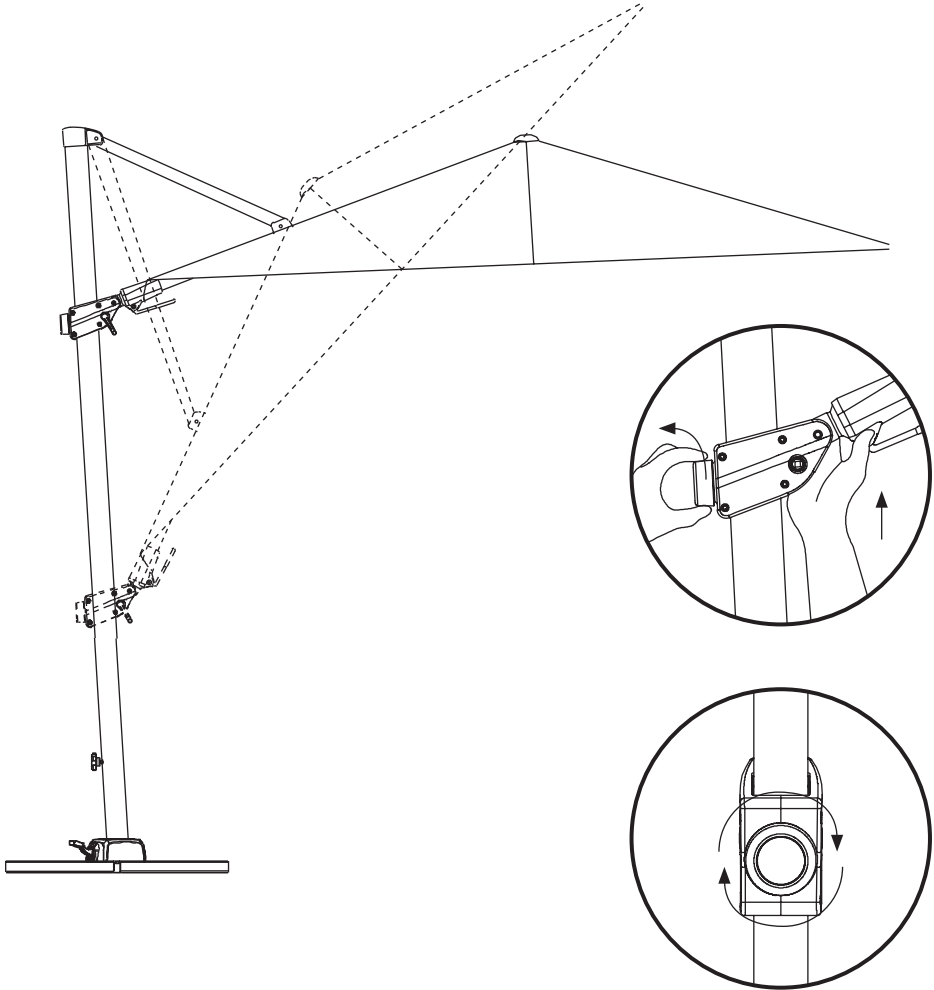

How to operate


Tilting the parasol

To tilt the parasol, pull the internal lever downwards and rotate with the lever into the desired position. Once in the desired position, push the lever back up to lock into place.

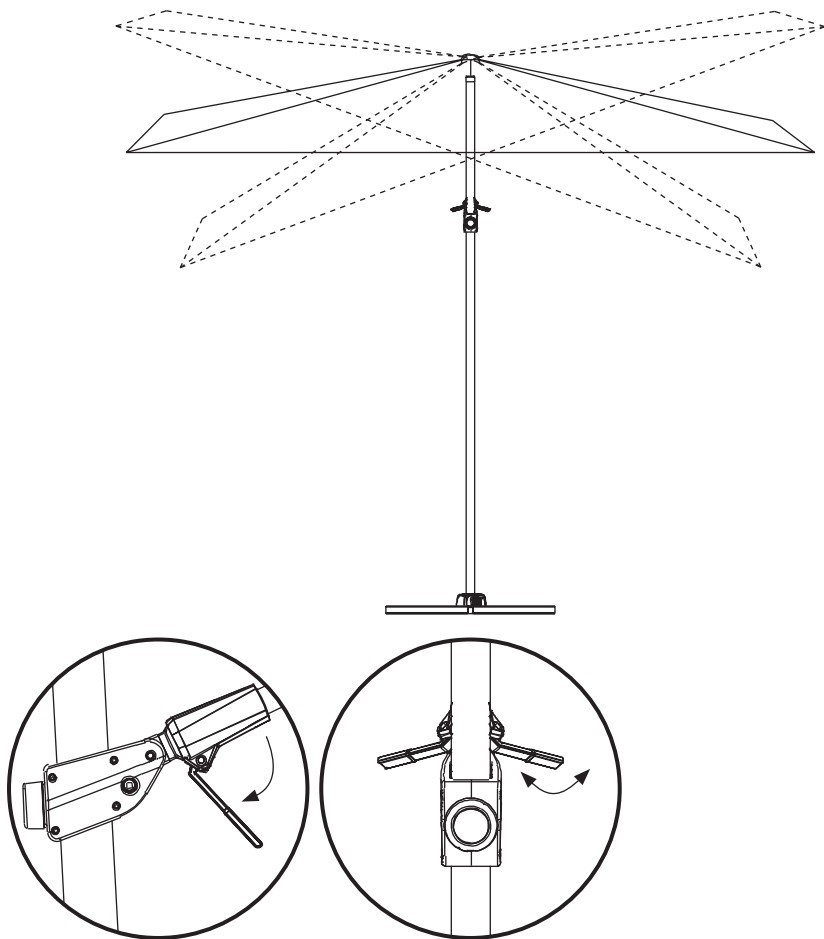

Rotating the parasol



To rotate the parasol, press down on the pedal with your foot and rotate the parasol. Once in the desired position release the pedal.

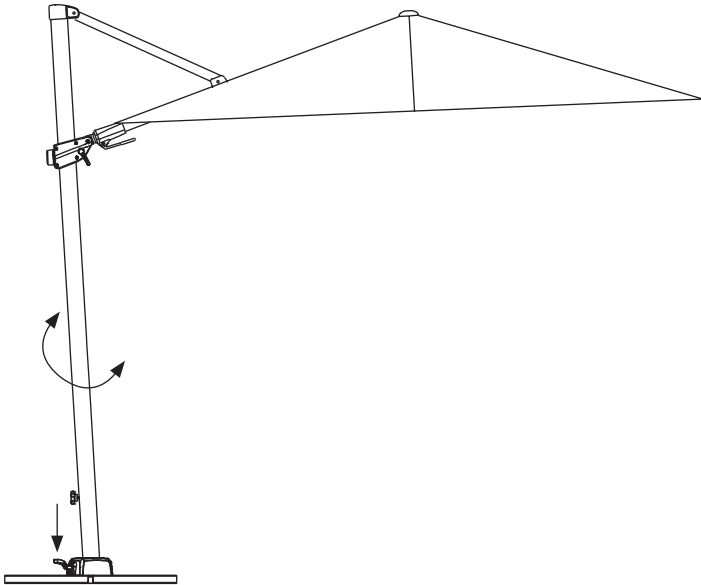

How to operate


Operating LED lights

To operate the LED lights, simply attach the battery pack to the parasol and press the button to turn on and off. To charge the battery pack, connect the USB cable to the battery pack and a suitable outlet.

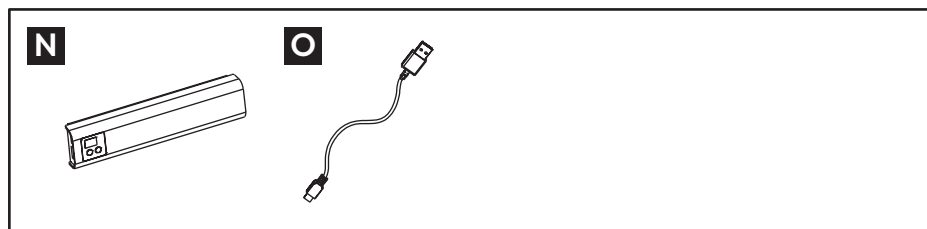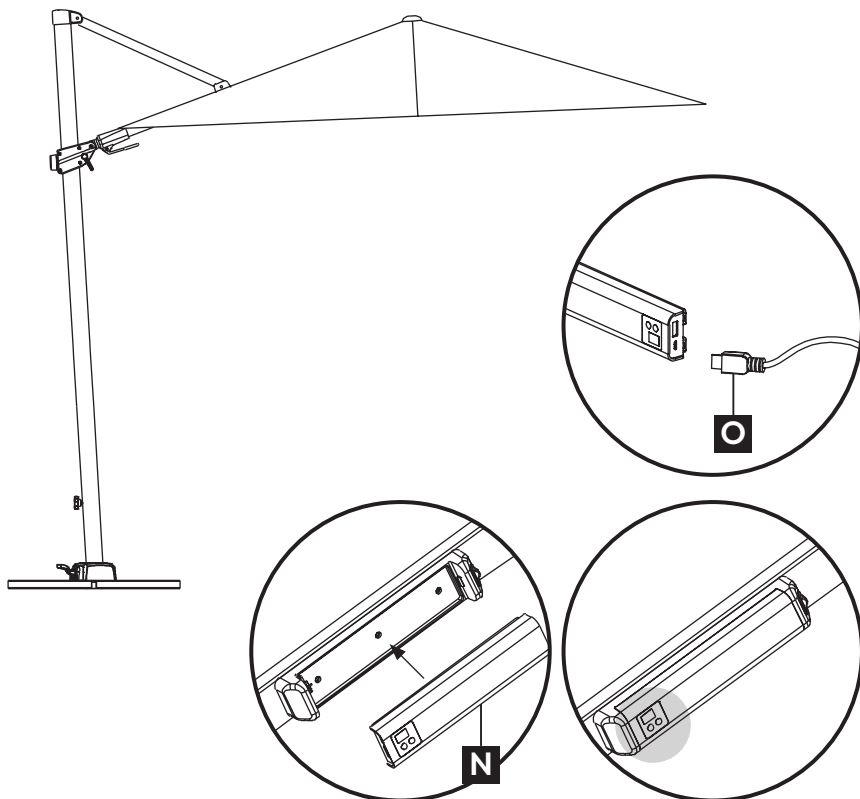

Operating LED lights


To remove the battery pack, simply press on the button at the end of the battery pack and it will release from the housing.

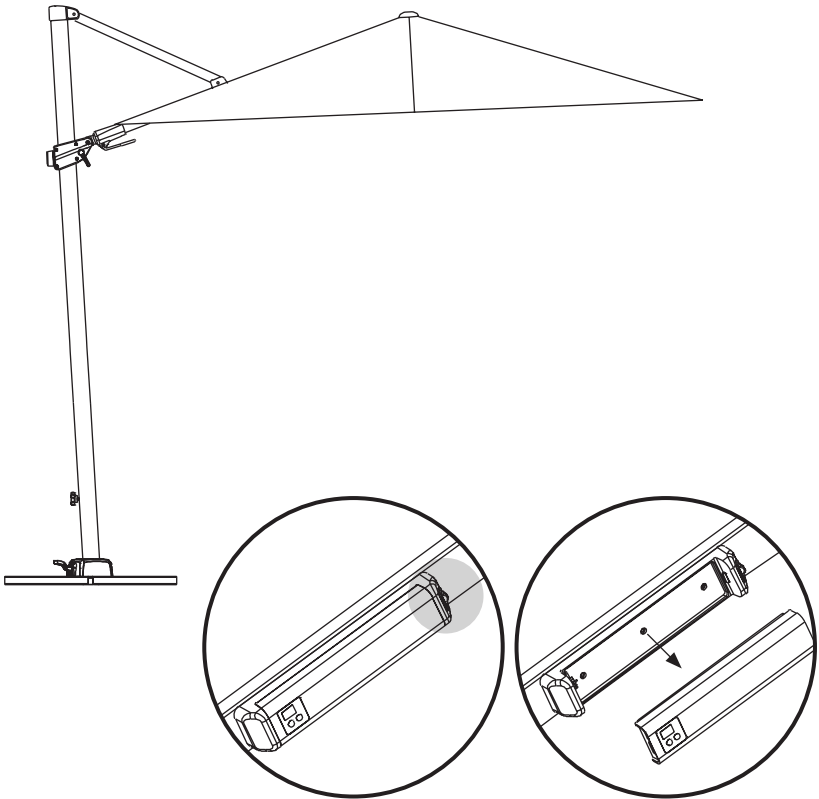

How to operate

Adding the cover

When not in use, close the parasol and unzip the rod assist cover. Slide the cover over the parasol, fasten the zip and secure with the drawstrings.

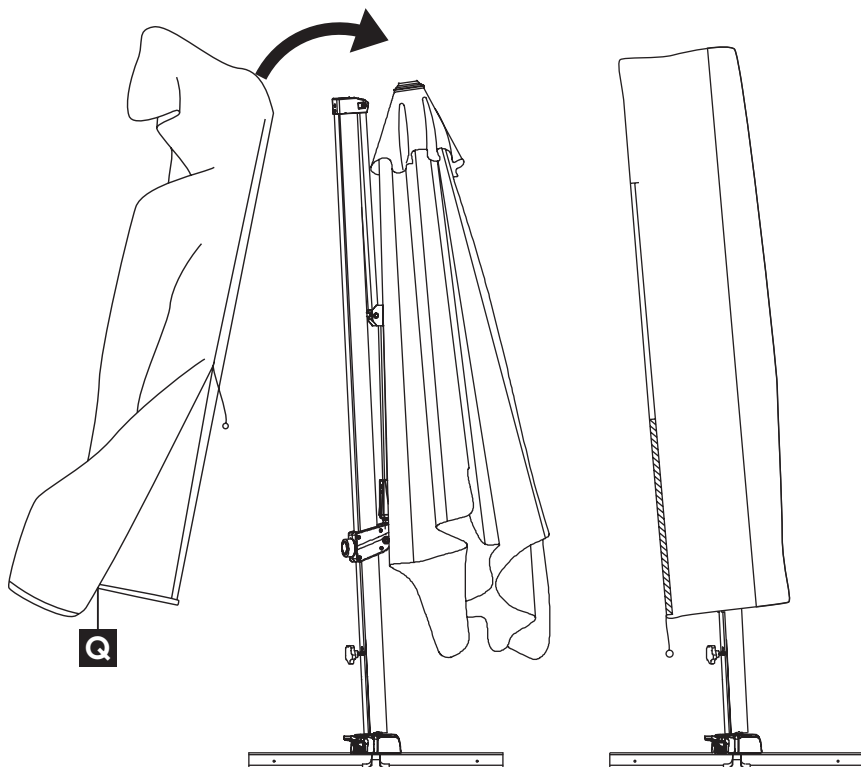

Care, Maintenance & Warranty Information

Parasol Care

We hope you enjoy your Nova Parasol. To get the best out of your parasol, follow our care instructions. When not in use, we recommend covering the parasol with a waterproof cover. If any dirt or debris falls on to the canopy, we advise cleaning it off as soon as possible with a warm, soapy water solution and a cloth. During the winter months, we recommend storing the parasol in a cool, dry place.

The parasol should not be left open when not in use or during windy conditions; please note that wind damage is not covered under warranty.

Warranty Information

We regret to inform you that warranty claims cannot be accepted without proof of purchase. Warranties are valid from the date of delivery to the original purchaser only. For us to help you, please ensure all warranty terms have been adhered to.

These terms can be found at <https://warranty.novaoutdoorliving.co.uk/>

The warranty applies to residential domestic use within the UK only. It does not cover commercial use, misuse, accidental damage or normal wear and tear. We reserve the right to repair and/or replace parts rather than a complete item at our discretion.

