 


Zesti 3KW Pergola Heater

SKU: NV074-101-006-C01

2026 v1.0

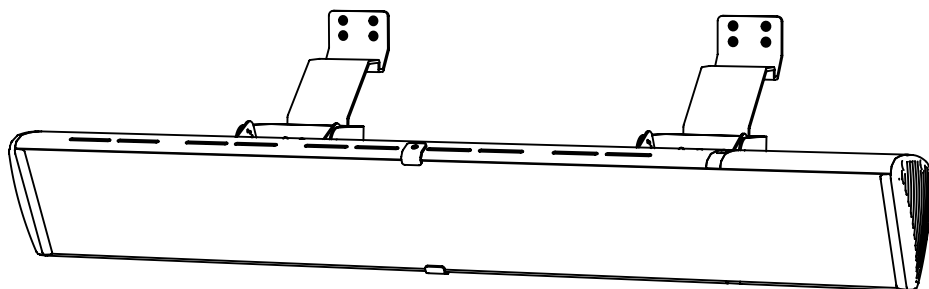

 
Assembly Instructions

IMPORTANT NOTICE

This booklet contains useful information about warranty & care instructions. Please keep for future reference.




Parts List

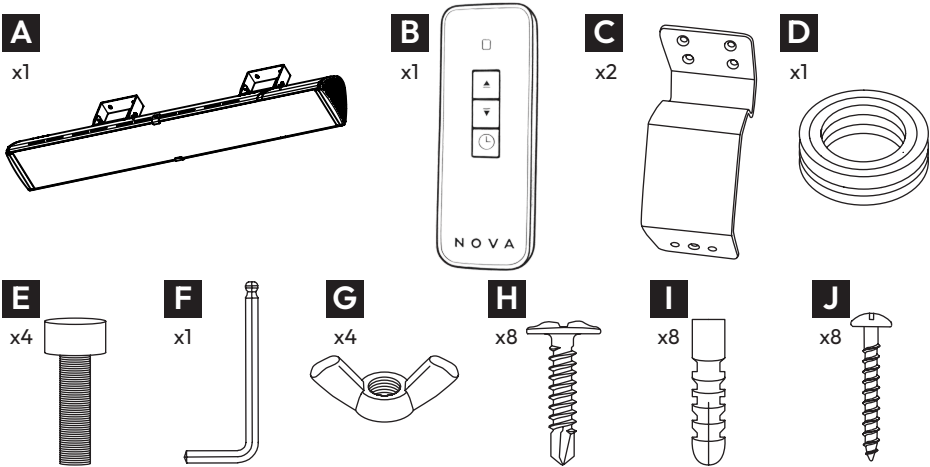

Parts List

Part	Qty	Part Name	Part	Qty	Part Name
A	1	Heater with 4m Lead	F	1	Hex Key
B	1	Remote Control	G	4	Butterfly Nut
C	2	Pergola Bracket	H	8	Self Tapping Screw
D	1	2m Lead with Plug	I	8	Rawl Plug
E	4	Hex Bolt	J	8	ST 4.8x35mm Screw

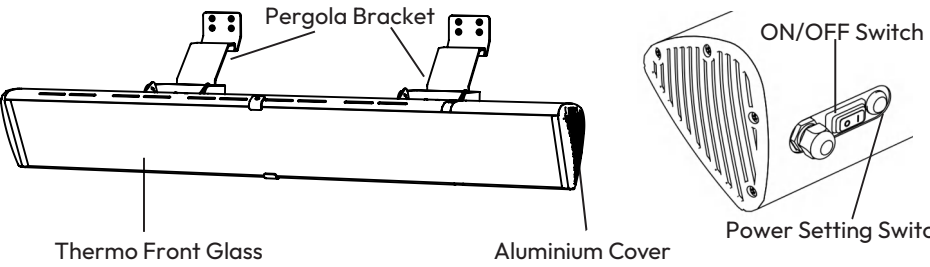 


WARNING! It is essential to comply with the below instructions to avoid accidents and prevent damage to the machine.

- Keep out of reach from children and pets.
- Do not use this appliance in small / confined spaces where there are people with reduced physical, sensory or mental abilities who cannot leave the room by themselves unless constant supervision is provided.
- Do not use the appliance if the cord is frayed or if the appliance has been dropped or otherwise damaged.
- To avoid the risk of electric shock, do not attempt to repair the device yourself, contact a qualified technician for repair. Only use supplied power supply.
- Do not cover or block the appliance with any object or items of clothing as there is a risk of overheating and fire!
- Never leave the appliance unattended for several hours and always switch off the appliance when you leave the operating area.
- Keep a sufficient safety distance of at least 1 metre from flammable objects such as furniture, curtains, papers, dry grass, bushes, etc.
- The appliance develops high temperatures during operation.
- The appliance is intended exclusively for private, domestic and outdoor use only.
- Use the appliance only in a grounded and properly installed outlet.
- Check the exterior walls for damage before installing the appliance onto the wall.
- Make sure the appliance is securely fixed to the Pergola or wall and do not use as a portable device.
- Do not place the appliance directly under an outlet.
- Keep the appliance away from heat sources, direct sunlight, moisture, bathtubs, showers, sinks, swimming pools or in any location where the heater can come into contact with water.
- Do not use the appliance in conjunction with a scheduler, timer or any appliance that can activate it automatically.
- Do not plug the appliance into an extension cord or power strip.
- Periodically check the appliance and the cable for any damage. The check must be carried out by a qualified technician.
- Do not use the appliance if it is cracked.
- Do not overload power supply.
- Never attempt to open any part of the appliance or disassemble its control switches.
- Do not use the appliance in areas with a lot of dust, because dust can accumulate on the heating elements and cause the appliance to overheat.
- Never touch the appliance with wet or damp hands or feet or with any other source of electricity.
- Unplug the appliance from the power supply when installing, cleaning and/or replacing the lamp and make sure the lamp is cold.
- Unplug the appliance from the power supply when not in use. To disconnect the appliance, switch it off and remove the plug from the outlet. Do not remove the plug from the outlet by pulling on the power cord.
- The guard of this appliance is intended to prevent the risk of fire or injury from burns and no part of it must be permanently removed. The protective grill must not be removed or modified.
- When the appliance is not used for a long time, e.g. during the winter, it is recommended to keep it covered or stored in its original packaging. Make sure appliance is cool before storing.

Attaching The Heater To The Pergola

STEP 1

 
Decide the correct position of your heater. Either placed between the louvres or on the end beam. Make sure there is no obstruction to the opening or closing of the louvres once assembled.

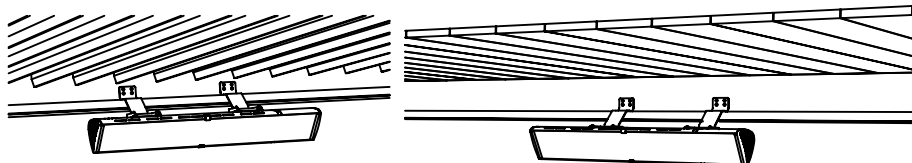

STEP 2

Use the positioning sticker to position two brackets at the correct distance.

 
Secure the brackets to the Pergola using the 4x self-tapping screws on each.

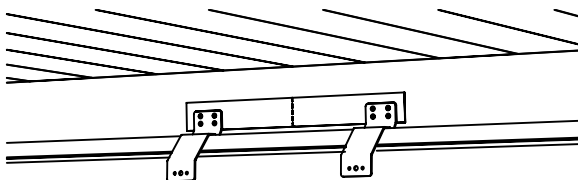

STEP 3

Secure the heater to the Pergola brackets using the 2x hex bolts, 2x butterfly nuts on each and hex key.

 Once assembled, connect the 2m lead with plug to the heater.

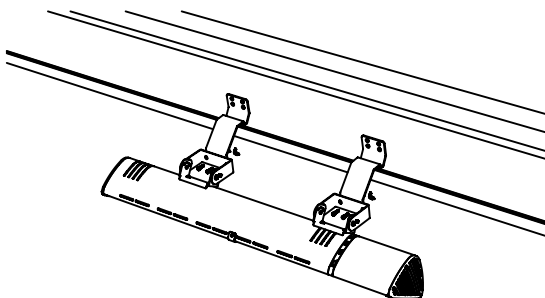

SAFETY WARNING!

Remove all packaging materials and keep out of the reach of infants and children.

Make sure that the power cord is well positioned and does not come into contact with the heater reflector or is not exposed in front of the area where the appliance emits heat.

Attaching The Heater To The Wall

STEP 1

Align the bracket level on the wall and mark the holes.

STEP 2

Use an M8 masonry drill bit to drill the 4 holes for each bracket, then insert the rawl plugs.

STEP 3

 
Screw the brackets on the wall using ST 4.8x35mm screws, then attach the heater.

CORRECT INSTALLATION ON THE WALL

Do not place the appliance at an angle greater than 60° from the rear wall.


The appliance must be at a distance of at least 180cm from the ground and 50cm from the ceiling and 50cm from a side wall.

The appliance must only be placed in a horizontal position. It is forbidden to place it in a vertical position.

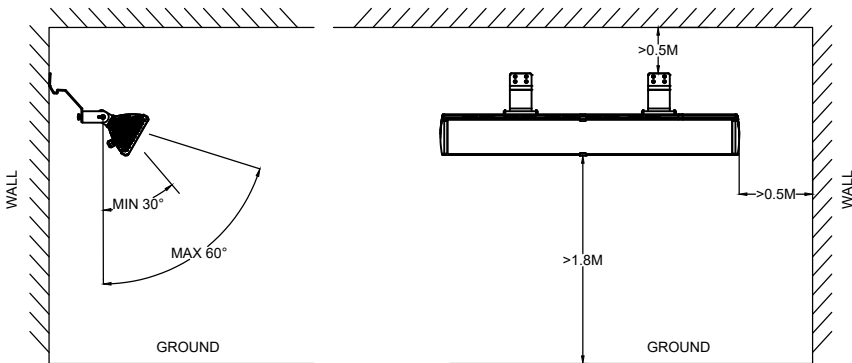

ADJUSTING THE ANGLE OF INCLINATION

 To adjust the desired angle of inclination of the appliance, loosen the fixing screw, select the desired angle by following the instructions mentioned above and secure the appliance at that angle by screwing the fixing screw tightly.

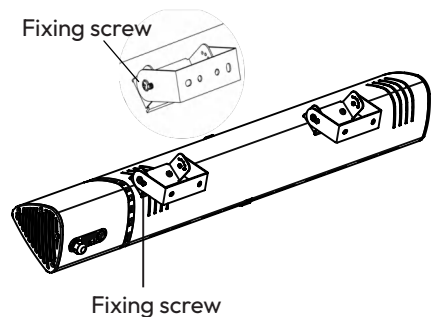

Using the Heater, Timer & Remote Control

To activate the heater, follow the below steps:

By Switch on heater:



- 1) Press the ON/OFF switch located at the bottom of the heater to put the device into standby mode (on the appliance screen it will show “P0”).
- 2) To change the Heater Setting, press the round switch to cycle through the various heat settings.



P1 = 1000W

P2 = 1600W

P3 = 2000W

 
By Remote Control:

- 1) When the heater is in standby model, you can also select the desired power level by pressing the up / down arrow button on the remote control.
- 2) When the Heater setting is selected, you can set a timer (between 1 & 24 hours) to shutdown the power by pressing the timer symbol -



Additional Notes:

- 1) Before using the remote control, please remove the battery insulation flake.
- 2) If the remote control is not working, first check if the batteries need replacing. If the remote control is still not working, you may need to re-pair the remote control with the heater.



Power Settings

24-HourTimer

NOVA

Using the Heater, Timer & Remote Control

To pair a remote control with the heater:

- 1) Press and hold the power setting switch at the bottom of heater for 3 seconds until the signal light starts flashing – 
- 2) Then press the up arrow button on the remote control – 
- 3) The indicator light on the heater will flash rapidly and then stay on indicating that the remote control is successfully paired.

To delete a paired remote control:

- 1) Press and hold the power setting switch at the bottom of heater for 6 seconds – 
- 2) The indicator light will flash rapidly and then stay on indicating that all paired remote controls have been deleted.

Care, Maintenance & Warranty Information

Cleaning & Maintenance

- Follow these instructions to properly and safely care for your appliance.
- Always disconnect the appliance from the power supply before cleaning or assembling it and always turn off the appliance by selecting the OFF position from the heater button.
- Do not submerge or pour water directly on the appliance. Risk of electric shock and fire.
- Do not allow water to drip onto or into the appliance.
- Clean the surface with a fresh and soft cloth.
- Do not use wire brushes or other sharp objects.
- Do not use harsh, abrasive or corrosive detergents or solvents to clean the appliance.

Storage

- Always turn off the appliance by selecting the OFF position from the heater button before cleaning, assembly or storage.
- Before storing the appliance, always disconnect the device from the power supply.
- Make sure the appliance is cold and dry before storing.
- Always store the appliance out of the reach of children.
- Always store the appliance in a safe and clean place. To best protect the appliance, store it in its original packaging.

Disposal of Appliance and Accessories



- This symbol appearing on the product, its accessories or accompanying manuals indicates- that the product and its electronic accessories should not be disposed of with other household trash.
- To avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.
- Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.
- Disposal of Batteries
- The batteries should not be disposed of with other household waste at the end of their life cycle.

Warranty Information

We regret to inform you that warranty claims cannot be accepted without proof of purchase. Warranties are valid from the date of delivery to the original purchaser only. For us to help you, please ensure all warranty terms have been adhered to.

These terms can be found at <https://warranty.novaoutdoorliving.co.uk/>

The warranty applies to residential domestic use within the UK only. It does not cover commercial use, misuse, accidental damage, or normal wear and tear. We reserve the right to repair and/or replace parts rather than a complete item at our discretion.

Model No:	NV074-101-006-C01
Power:	1500W/2400W/3000W
Supply:	240V~ / 50Hz
Heated Area:	15m²
Cable Length:	4M + 2M H07RN-F 3G1.5mm²
Protection Class:	IP55

The Zesti Pergola Heater complies with the following standards:

EMC Directive 2014/30/EU
EU Low Voltage Directive 2014/35/EU
RoHS Directive 2011/65/EU (and amendment Directive (EU) 2015/863)

Notes



Manufactured by: Nova Outdoor Living LTD, SS11 8YW