

Avery

Dimension


ø 60 x 8 cm

ø 60 x 8 cm Lazy Susan

SKU:

NV005-102-LS-101-C03

2025 V 1.0

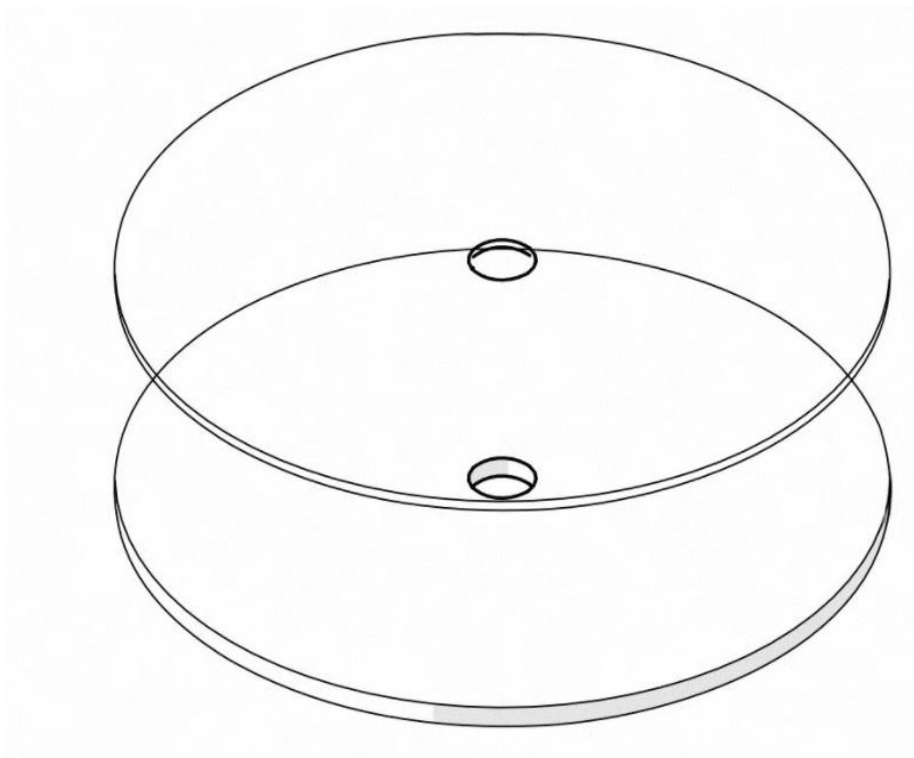

Assembly Instructions

IMPORTANT NOTICE

This booklet contains useful information about warranty & care instructions. Please keep for future reference.




Parts List & Safety Advice

Safety Advice

Before you start:

- Ensure that you read this manual before starting to assemble your furniture.
- Check that you have all parts from the parts list. Do not throw away any packaging until you are confident that you have all parts.
- Keep any plastic bags, tools and fittings away from children and pets.
- Please do not modify this product, use other tools, or substitute parts to build your item(s), as this will void your warranty.
- Please only use this product for its intended purpose as outdoor furniture within a residential environment. Failure to do so will void your warranty.
- We reserve the right to make changes for product improvements.
- Please recycle packaging where possible.
- Nova Outdoor Living holds no responsibility for any damages caused due to normal wear and tear, incorrect assembly, misuse and/or negligence.

Parts List

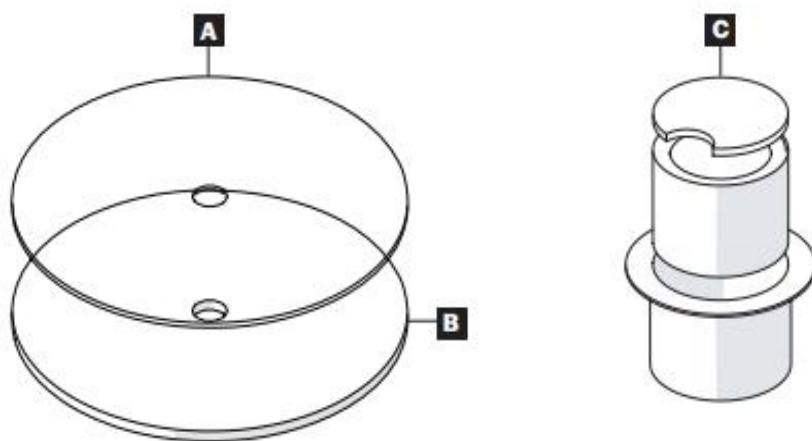

Once the glass has been added (A) to the lazy Susan (B) position the item onto the table top (C). If you are using a parasol, insert the parasol ring into the Lazy Susan. If you are not using a parasol, insert the parasol hole cap into the centre of the Lazy Susan.

Part	Qty	Part Name
A	1	Glass
B	1	60cm Round Lazy Susan
C	1	Parasol Ring, Reducer & Cap

Care & Maintenance

RATTAN CARE

- Rattan furniture is so popular due to being very low maintenance. With this being said, it is still strongly encouraged that you look after your lazy Susan with the occasional upkeep.
- At the start of the season, we recommend cleaning the rattan pieces with warm, soapy water. You can use a cloth or a soft-bristle brush with gentle pressure. Once you have finished, wash off any residue with clean water from the garden hose.

Warranty Information

We regret to inform you that warranty claims cannot be accepted without proof of purchase. Warranties are valid from the date of delivery to the original purchaser only. For us to help you, please ensure all warranty terms have been adhered to.

These terms can be found at <https://warranty.novaoutdoorliving.co.uk/>

The warranty applies to residential domestic use within the UK only. It does not cover commercial use, misuse, accidental damage, or normal wear and tear. We reserve the right to repair and/or replace parts rather than a complete item at our discretion.

