


Nova Privacy Screen

2026 v2.0

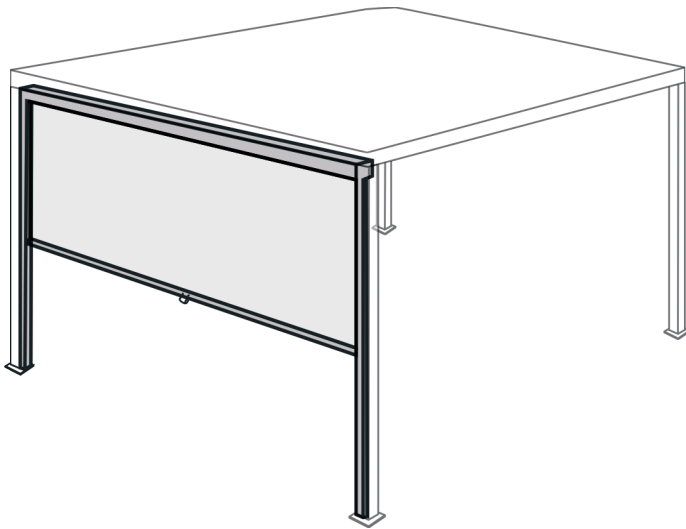

Assembly Instructions


IMPORTANT NOTICE

This booklet contains useful information about warranty & care instructions. Please keep for future reference.



Parts List

A x1

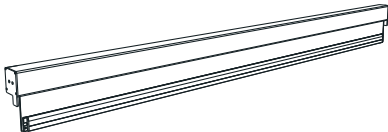

B x2



C x8



 
D x8




E x1



F x1



G x2

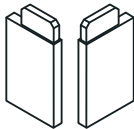

Parts List


Part	Qty	Part Name
A	1	Screen
B	2	Side Channel
C	8	7mm Cap
D	8	3.9x30mm Screw



Part	Qty	Part Name
E	1	3.2mm Drills
F	1	Screwdriver
G	2	Decorative cover

Safety Advice - Before you start



- This product contains heavy components. Take care when lifting and assembling; two-person installation is recommended.
- Check that all fittings, screws, and components are securely fastened on the Pergola before and after installation.
- Keep hands and fingers clear of the side channels during operation
- Do not allow children to play with, hang on, or operate the screen unsupervised.
- Retract or secure the screen in strong winds or severe weather.
- Do not operate the screen if it is damaged, obstructed, or frozen.
- Do not modify or alter the product in any way.
- Use this product only for its intended purpose within a residential environment. Failure to do so will void your warranty.
- Nova Outdoor Living holds no responsibility for any damage caused by normal wear and tear, incorrect assembly, misuse, or negligence.
- We reserve the right to make changes for product improvements.
- Please recycle packaging where possible.

Assembly

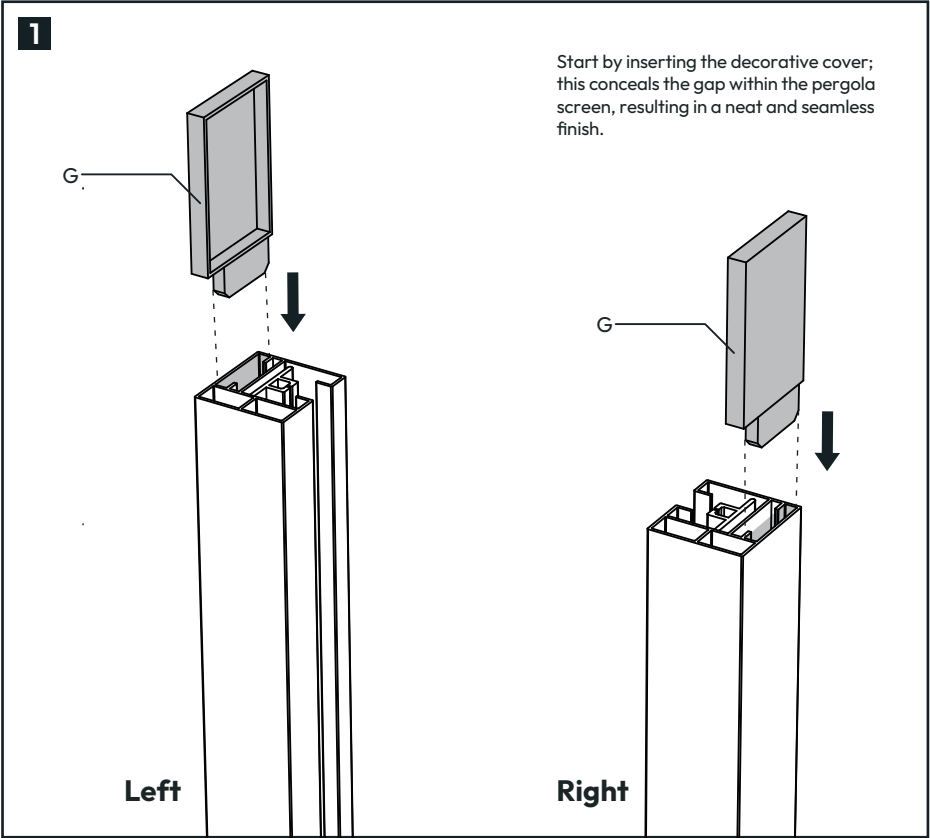

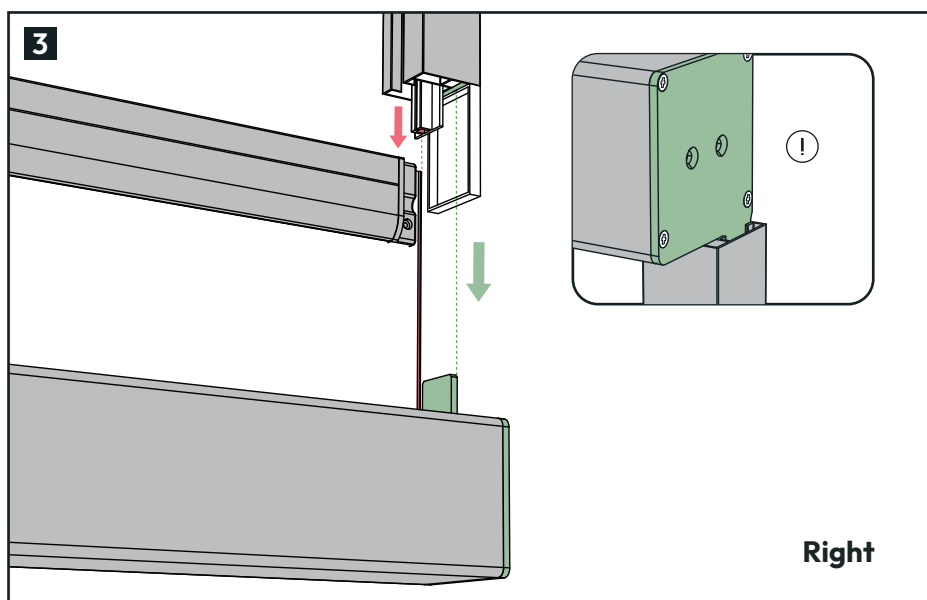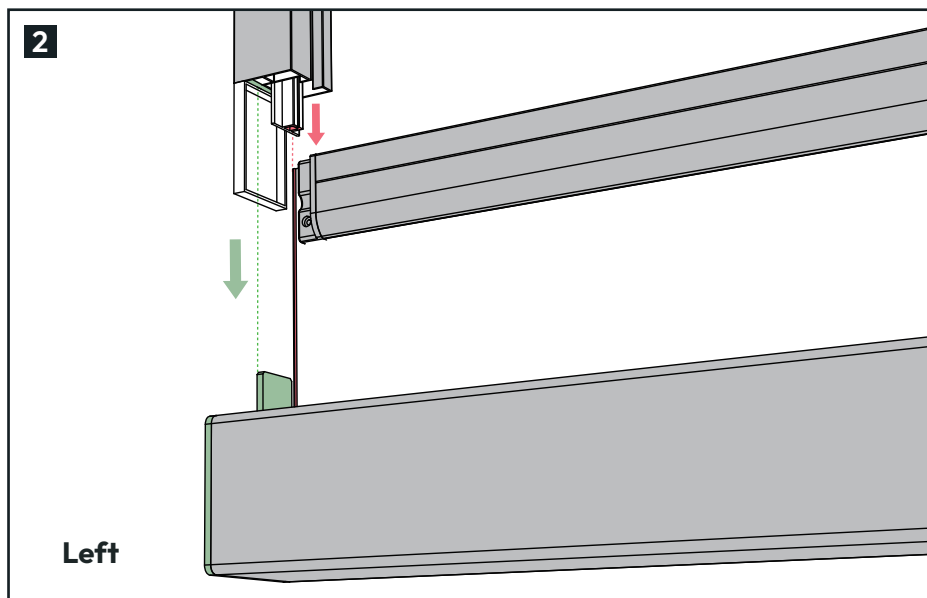




Assembly

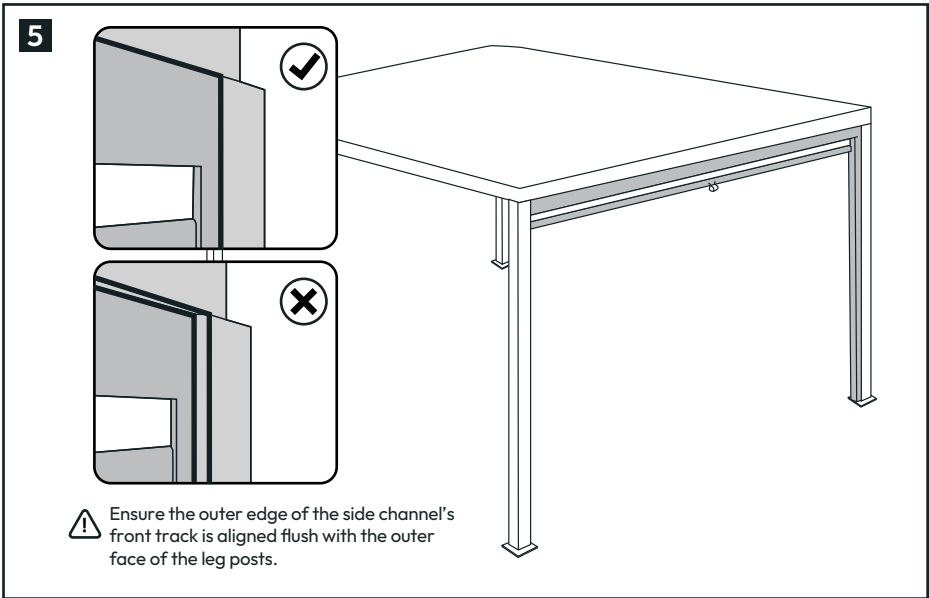
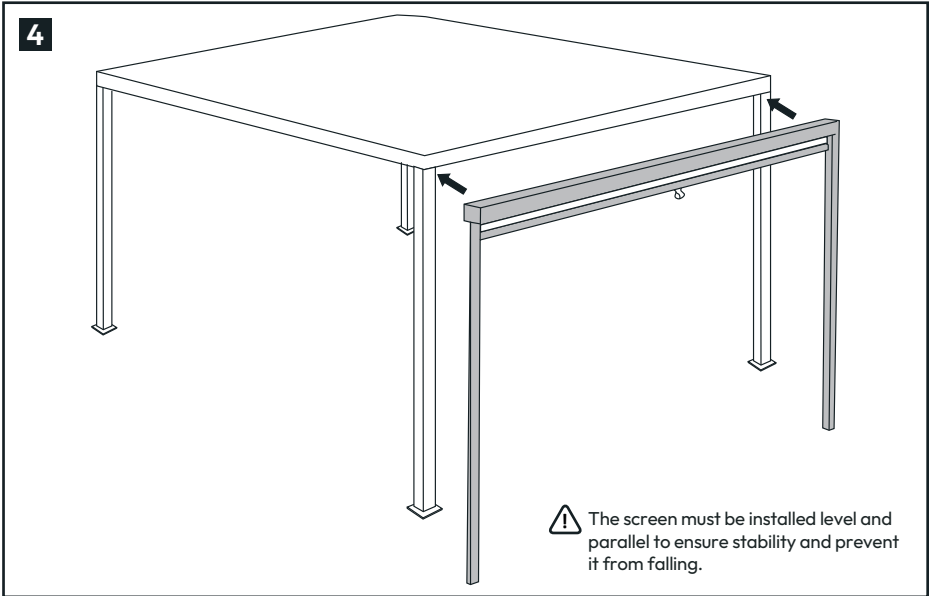


6

When the screen is installed on the front (side with the gearbox), the top cassette should be flush with the front beam, not the leg posts. This will stop the screen from interfering with the gearbox and handle.

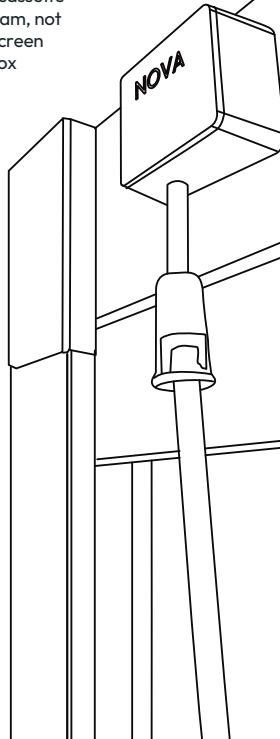

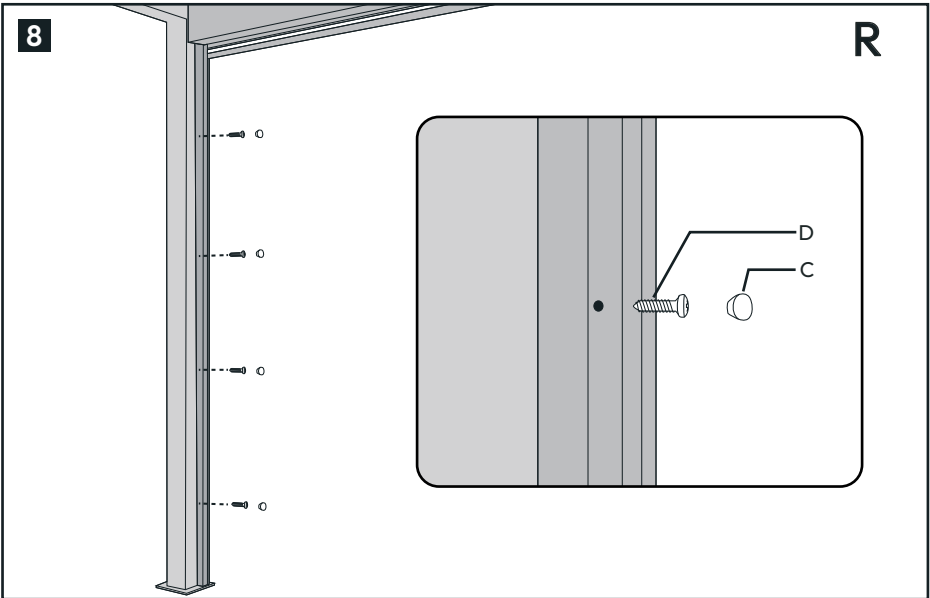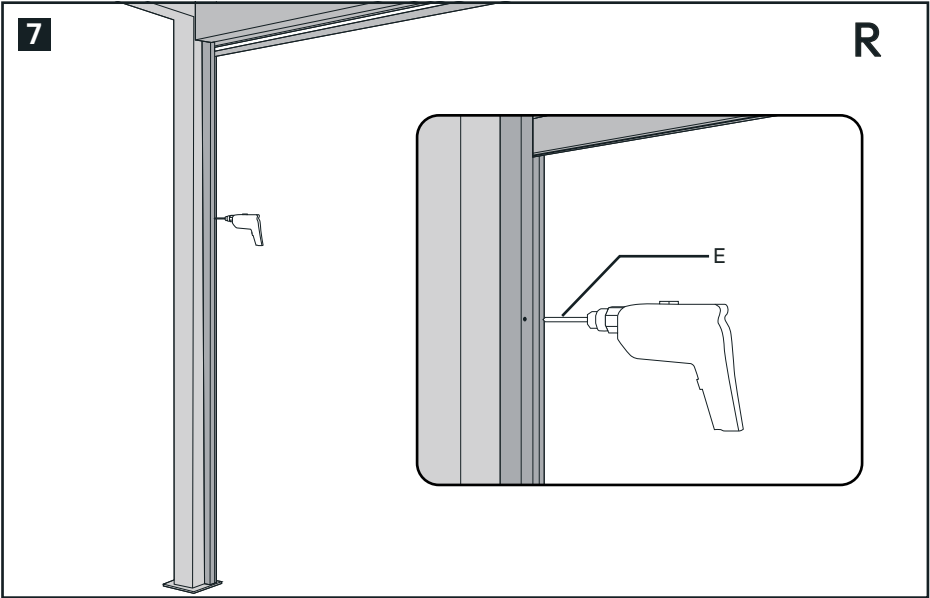

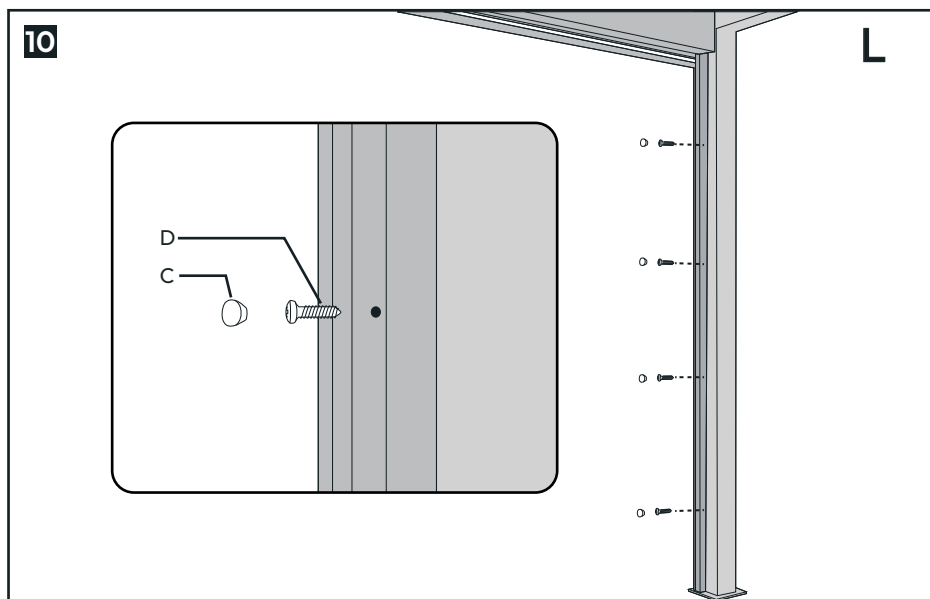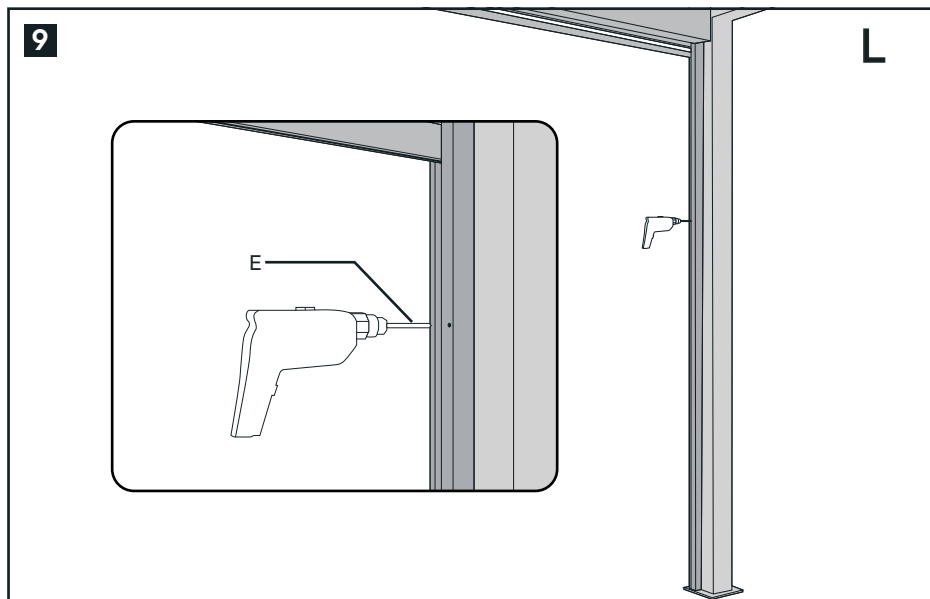

Care & Maintenance

- Wipe rails and components with a soft cloth and mild soapy water.
- Brush off loose dirt regularly.
- Keep tracks clear - Remove dust, leaves, and debris from the side channels/guide tracks to ensure smooth operation.
- Inspect periodically - Check screws, caps, and rails for loosening, wear, or damage. Tighten or replace as needed.

Warranty Information

We regret to inform you that warranty claims cannot be accepted without proof of purchase. Warranties are valid from the date of delivery to the original purchaser only. For us to help you, please ensure all warranty terms have been adhered to.

These terms can be found at <https://warranty.novaoutdoorliving.co.uk/>

The warranty applies to residential domestic use within the UK only. It does not cover commercial use, misuse, accidental damage, or normal wear and tear. We reserve the right to repair and/or replace parts rather than a complete item at our discretion.

