


NOVA INSTRUCTIONS OF 100 LITRE CANTILEVER PARASOL BASE

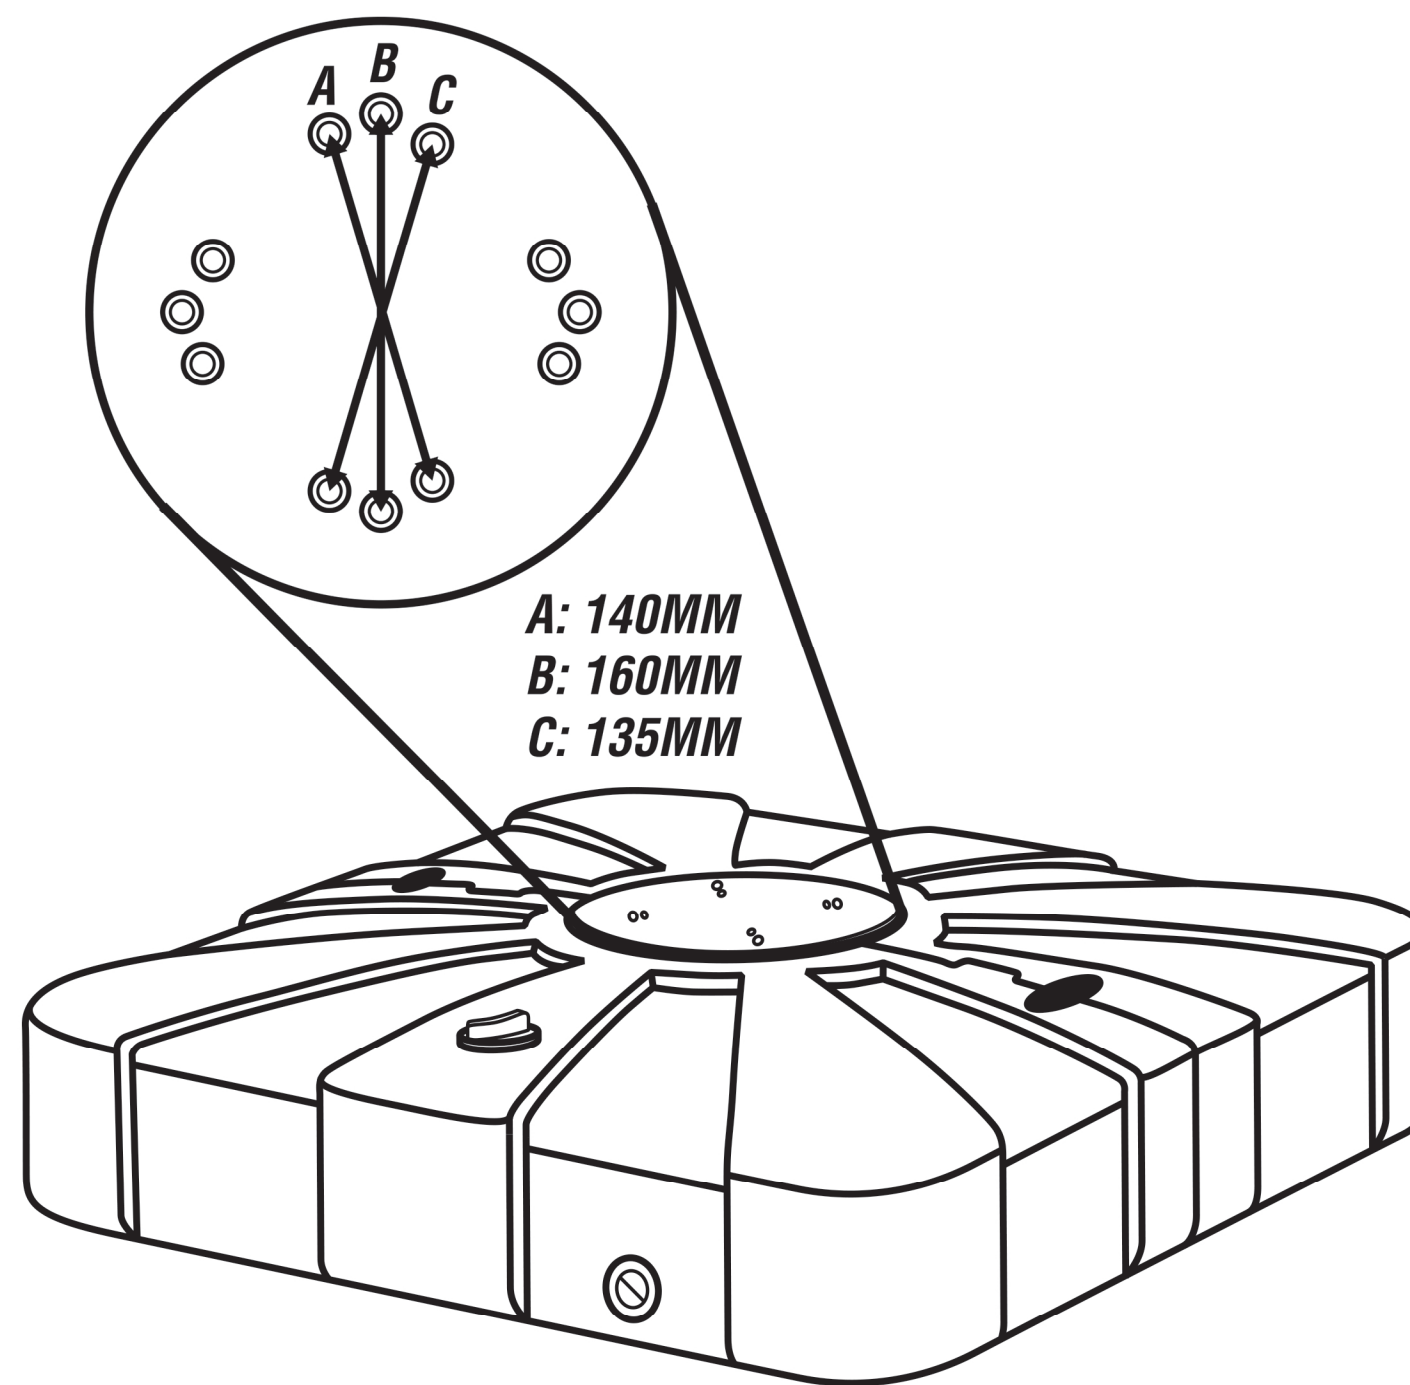

If your umbrella metal pole hole distance is 160mm,
just screw it on the position B.

If your umbrella metal pole hole distance is 135mm or 140mm,
please adjust the screws to right position.

